



BEB-600-T

LIBRO ELECTRÓNICO-PANTALLA TÁCTIL 6"-MP3

Manual de Instrucciones

CONTENIDO

Introducción

- Piezas y controles
- Encendido/Apagado
- Administración de energía

Suspend/Wake up

- Carga de batería
- Comprobar el estado de la batería
- Cómo utilizar la pantalla táctil
- Cómo utilizar el teclado
- Cómo utilizar iconos
- Cómo utilizar el menú principal
- Cómo utilizar el teclado en pantalla
- Inserción de una tarjeta de memoria
- Extracción de una tarjeta de memoria

Lector de libros

- Lectura de libros
- Uso del menú de opciones de la lista de libros
 - Cambio del formato de visualización
 - Búsqueda de un libro con una palabra clave
- Operaciones en las páginas del libro
 - Pasar páginas
 - Volver a la lista de libros
- Uso del menú de opciones de la lista de libros
 - Cambio del formato de visualización
 - Búsqueda de un libro con una palabra clave
- Operaciones en la página del libro
 - Convertir una página
 - Volviendo a la lista de libros
- Uso del menú de opciones de la página del libro
 - Destacado de texto
 - Administrar marcadores
 - Ver marcadores
 - Uso del menú de opciones de la lista de favoritos
- Buscar por palabra clave
- Uso de la tabla de contenidos
- Enlace interno
- Saltar páginas ("Ir a la Página")
- Ajuste del tipo de letra
- Ampliación de la página (sólo PDF)
- Ajuste el tamaño de fuente
- Ajuste la distancia entre líneas
- Volver a la lista
- Eliminar

- Información
- Orientación
- Cerrar

Cómo utilizar Adobe DRM

Visualización de imágenes

- Opción de menú "Imágenes"
- Cambio del formato de visualización
- Buscando imágenes
- Operaciones con el visor de imágenes

Visor de cómics

- Opciones del menú "Cómics"
- Cambio del formato de visualización
- Navegación en cómics
- Operaciones en el visor de cómics

Reproducción de archivos de audio

- Opciones del menú de "Audio"
- Operaciones en el reproductor de audio
- Otras características del reproductor de audio

Configuración

- Cambio de configuraciones
- Configuración de opciones de menú

 
Otra información

- Notas sobre la Eliminación
- Precauciones
 - Seguridad
 - Acumulación de calor
 - Auriculares
 - Nota sobre el uso
 - Notas sobre las tarjetas de memoria
 - Acerca de la limpieza

Especificaciones

INTRODUCCIÓN

Partes y Controles

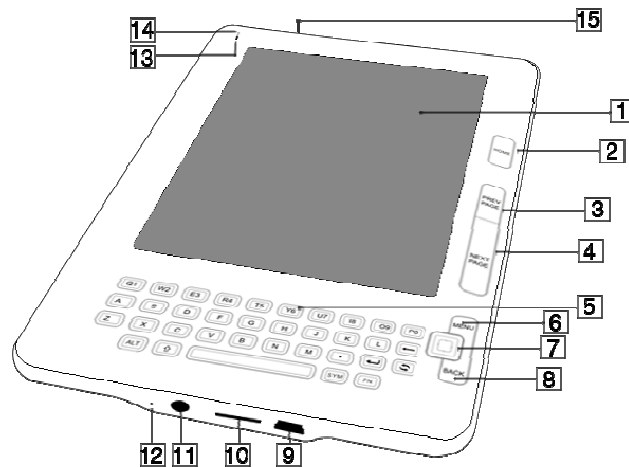

1. Pantalla EINK 6" táctil

La pantalla táctil le ofrece un acceso sencillo a las diversas funciones.

2. Botón de Inicio.

3. Botón de página anterior

4. Botón de página siguiente

5. Teclado

6. Botón Menú

7. Control de 5 direcciones

8. Botón Atrás

9. Entrada para el conector USB

10. Entrada Micro SD (TF)

11. Entrada de auriculares

12. Receptor de sonido

13. LED verde

Indica que el lector está en funcionamiento. Se apaga cuando el lector está apagado o en modo de ahorro de energía. La interfaz de usuario se mostrará en la pantalla cuando el lector está en modo de ahorro de energía. La pantalla estará en blanco cuando el lector está apagado. Utilice cualquier tecla para reactivar el lector. Al tocar en la pantalla táctil no se reactivará el lector.

14. LED rojo

Indica que el lector está conectado a una toma de corriente u ordenador mediante USB. La batería se está cargando. Se apaga cuando la carga está completa.

15. Interruptor de encendido y bloqueo

16. RESET: Restablece el lector. El botón de reinicio se encuentra en la parte posterior del lector.

Encendido/Apagado

Deslice y sostenga el botón de encendido durante 2 segundos para encender el lector. Asegúrese de encender el lector antes de conectarse a su computadora. Deslice y sostenga el interruptor de encendido para apagar el lector.

Notas

- Al encender el lector empieza a escanear todos los libros en el lector. Dependiendo del número total de libros almacenados en la memoria flash interna y externa de la tarjeta Micro SD (TF), el proceso de exploración puede durar varios minutos. El proceso de exploración es necesario.
- La operación de escaneo se inicia automáticamente en los siguientes casos:
 - Después de conectar el dispositivo;
 - Tras insertar o extraer una tarjeta externa
 - Después de desconectar el lector desde el puerto USB de un ordenador.

Administración de energía

El lector tiene una función de administración de energía para evitar el consumo innecesario de la batería. La administración de energía está activada por defecto. La administración de energía funciona de la siguiente manera:

- Tras de 15 minutos de inactividad, el lector se apaga automáticamente. Usted puede activar/desactivar la administración de energía de la "Administración de energía" en el menú "Configuración".

Suspender/Wake Up

Con el fin de ahorrar energía, el lector va a la "suspensión" (modo de suspensión) después de 3 segundos de inactividad de teclado o pantalla táctil. Pulse cualquier tecla para reactivar (despertar) el lector nuevo.

Sugerencia: Al tocar en la pantalla táctil no se reactiva el lector.

Carga de batería

Es necesario cargar el lector antes de usarlo por primera vez, o cuando la carga de la batería sea baja. Cargue el lector de alguna de las siguientes formas:

- A una toma de corriente doméstica con el adaptador indicado para el lector. La carga durará aproximadamente 5 horas para cargar completamente la batería.
- Conectar a un ordenador mediante USB. La carga a través de USB tarda mucho más tiempo que a través de una toma de corriente.

Comprobar el estado de la batería

Usted puede verificar la carga de la batería mediante el indicador de la batería en la parte inferior izquierda de la pantalla. Cargue la batería cuando la energía restante es baja.

Notas:

- Use el cargador entregado y cable USB para cargar el lector.
- Mientras esté conectado a su ordenador vía USB, no podrá hacer funcionar el lector.
- No deje el lector conectado a un ordenador portátil que no está conectado a una toma de corriente durante un período prolongado. Se puede consumir la batería del ordenador portátil.
- Mientras que el lector está conectado a su ordenador, no encienda, reinicie, active el modo de suspensión o apague el equipo. Estas operaciones pueden hacer que el lector no funcione correctamente. Desconecte el lector del ordenador antes de realizar estas operaciones.

Cómo utilizar la pantalla táctil


Utilizando la pantalla táctil opcional, usted puede realizar varias operaciones con un dedo o con un lápiz táctil.

Notas:






 



Tocando: Al pulsar en la pantalla táctil, se puede seleccionar un elemento en el menú o la lista de opciones, etc.

Arrastrando: Al arrastrar en la pantalla táctil, usted puede dar vuelta a una página o seleccionar un texto para resaltar.

Cómo usar el teclado


Iconos	Descripción
FN	Cambia la orientación de la pantalla
	Refresca la pantalla
Home	Para volver al menú principal
PREV PAGE	Página anterior
NEXT PAGE	Página siguiente
MENU	Abrir en cada caso el menú de opciones
BACK	Volver a la ventana anterior
Espacio	Para abrir el menú tamaño de fuente y zoom

Cómo utilizar iconos

Iconos	Descripción
	Opciones: Situado en casi todas las ventanas. Permite abrir las opciones disponibles.
	Giro de página: Permite realizar giros en las páginas.
	Volver: Para volver a la pantalla anterior
	Buscar por palabra clave Flechas: Para ir a las páginas anterior/siguiente que contienen las palabras claves. X: Para cerrar la función buscar. Sólo en páginas de libro.
	Para mover el contenido en las cuatro direcciones cuando el zoom está activado. Sólo en páginas de libro.
	Para pasar las páginas del libro. Sólo en páginas de libro.
	Indica que un marcador se ha creado. Sólo en páginas de libro.
	Para seleccionar el tamaño de la fuente y zoom. Sólo en páginas de libro.
	Para abrir el teclado en pantalla. Se puede mostrar siempre.

Cómo utilizar el menú principal

 El menú principal es el punto de partida para usar las diversas funciones de su lector. Puede seleccionar elementos de menú con un toque en la pantalla táctil:

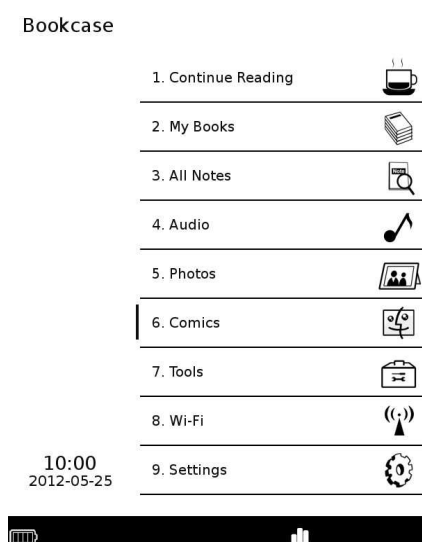

El menú principal contiene las siguientes funciones:

- Seguir leyendo: Pulse en "Continuar Leyendo" para continuar leyendo la última página visualizada.

- Mis Libros: Toque en "Mis Libros" para abrir la lista de libros. Toque en un libro de su elección. Puede ver EPUB, PDF, TXT, HTML, FB2, y archivos FB2 en su lector.

Fotos: Toque en "Imágenes" para abrir la lista de imágenes. Toque en una foto de su elección. Puede ver JPG, JPEG, GIF, PNG, BMP, TIF y archivos SVG en su lector.

 
Audio: Toque en "Audio" para abrir la lista de canciones. Toque en una canción de su elección. Puede reproducir archivos MP3 en el lector. También puede leer libros y ver imágenes o cómics, mientras que escucha archivos de audio. Los archivos de audio se pueden reproducir a través del altavoz incorporado o se pueden escuchar a través de auriculares

- Comics: Toque en "Comics" para abrir la lista de los comics. Toque en un cómic de su elección. Puede ver los archivos CBR y CBZ en el lector.

- Configuración: Toque en "Configuración" para abrir las opciones de configuración que desee cambiar. Puede configurar varios ajustes en el menú "Configuración".

Cómo utilizar el teclado en pantalla

El teclado en pantalla aparecerá cuando sea requerido por la función. Use el teclado en pantalla para introducir palabras.

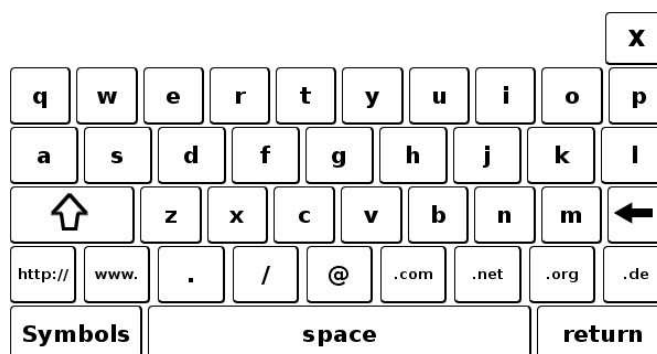

Sugerencias

Toque el botón "SYM" para mostrar los símbolos y las teclas numéricas.

Toque la tecla "CLR" para borrar sus palabras en el cuadro de entrada.

El diseño de los teclados en pantalla puede variar dependiendo de la función.

Inserción de una tarjeta de memoria

El lector soporta tarjetas Micro SD (TF)

Notas:

- No retire una tarjeta de memoria mientras que los datos de la tarjeta de memoria está siendo usados. De lo contrario, los datos editados no se

guardarán.

- Soporta tarjetas de memoria hasta 16 GB, sin embargo, no todas las tarjetas de memoria SD aseguran su funcionamiento.
- Al insertar la tarjeta de memoria en el lector puede necesitar algún tiempo para que reconozca todos los archivos, sobre todo si el número de archivos en la tarjeta es elevado.
- Asegúrese de insertar la tarjeta de memoria en la dirección correcta. La inserción forzada puede dañar el lector.
- No inserte una tarjeta de memoria no compatible, ya que puede causar un mal funcionamiento.
- No use una tarjeta de memoria deformada.
- Si el lector no reconoce la tarjeta de memoria por favor, apague el lector e inserte la tarjeta de memoria de nuevo y encienda el lector de nuevo.

Extracción de una tarjeta de memoria

Empuje suavemente la tarjeta de memoria. Oirá un clic, y la tarjeta de memoria debe salir. Retire la tarjeta de memoria directamente desde la ranura.

Notas: No retire una tarjeta de memoria o apague el lector al leer o escribir datos, los datos podrían dañarse.

LECTOR DE LIBROS

Lectura de libros

Siga los siguientes pasos para abrir un libro:

1. En el menú principal, seleccione "Mis libros".

Sugerencia: Si desea continuar con la lectura de la última página visualizada, pulse en "Seguir leyendo" en el menú principal. La última página visualizada aparecerá.

2. Toque en el libro deseado en la lista.

Ejemplo:

 


Sugerencias:

- "SD" significa que los libros se almacenan en la externa Micro SD (TF).
- El número de las páginas de la lista se muestra en la parte inferior de la pantalla. Si hay más de 9 libros almacenados, el número total de páginas de la lista se muestra como una del total, por ejemplo 1 de 2, lo que indica que la lista de libros contiene dos páginas totalmente y la primera página se muestra en primer lugar.
- Los libros se enumeran en varias formas. Si su libro deseado no aparece en la página de la lista actual, vaya a la página siguiente o use la opción de ordenación o de búsqueda para encontrar el libro. Puede pasar de página pulsando las flechas izquierda y derecha en la parte inferior de la pantalla.
- Si usted ha leído el libro antes, la última página del libro aparecerá cuando se abra el libro.

Uso del menú de opciones de la lista de libros


En la lista de libros, haga clic en el botón Opciones para abrir el menú de opciones:

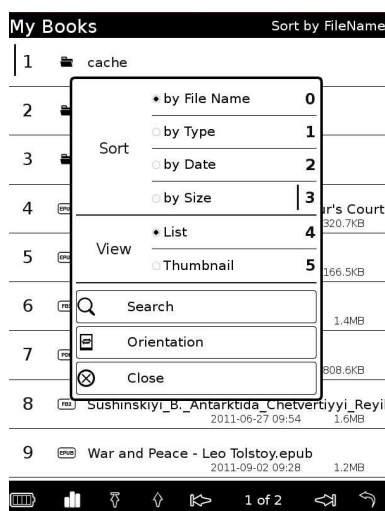

Opción	Descripción
Ordenar	Ordene "Mis Libros" por nombre, tipo, fecha o tamaño.
Ver	Cambio de forma de vista a lista o miniatura.
Buscar	Buscar libro por palabra clave.
Orientación	Cambia la orientación vertical/horizontal.
Cerrar	Para cerrar este menú.

Cambio del formato de visualización

 Puede optar por mostrar el formato de lista, ya sea en la "Lista" o vista en "Miniatura".

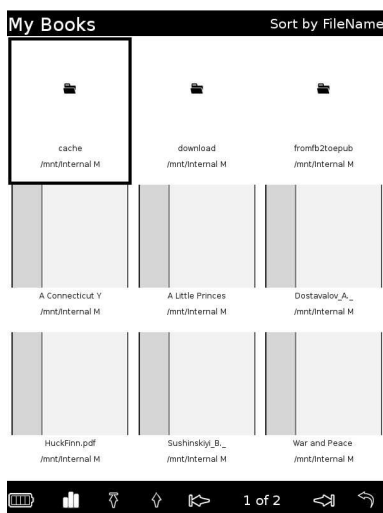

Búsqueda de un libro con una palabra clave

Utilice el teclado para buscar un libro, una nota o palabra. Usted puede buscar un libro escribiendo el título del libro o el autor.

1. En el menú Opciones, pulse "Buscar" para visualizar el teclado. El teclado en pantalla aparece.



2. Escriba una palabra en el área de entrada. La palabra aparecerá en el área de entrada.
3. Toque en una de las "flechas" en la pantalla. La lista de resultados de búsqueda aparecerá en la pantalla.



Sugerencias:

- Si hay más resultados en la lista de resultados se puede repetir la función "Buscar".

4. Toque en el libro deseado. Aparecerá la página del libro abierto.

Sugerencias:

- Puede realizar otras operaciones de búsqueda de la misma manera que el caso anterior después de seleccionar "Buscar" en cada menú de opciones.

Operaciones en la página del libro

 
En la pantalla de la página del libro, se pueden realizar las siguientes operaciones:

- Girar la página
- Saltar páginas ("Ir a la Página")
- Aumentar el tamaño de la página (Sólo formato PDF)
- El cambio de fuente (No permitido en PDF)
- Ajustar el tamaño de la fuente y espacio de línea (No permitido en PDF)
- Volver a la lista de libros
- Creación y gestión de marcas de libro
- Búsqueda por palabras clave
- Resaltar el texto
- Visualización de la tabla de contenidos (TOC)
- Visualización de la información del libro
- Cambio de la orientación de la pantalla (vertical / horizontal)

Pasar Páginas

Hay varias maneras de pasar una página:

1. Con los botones de 3 y 4.
2. Arrastrando en la pantalla hacia adelante o hacia atrás:

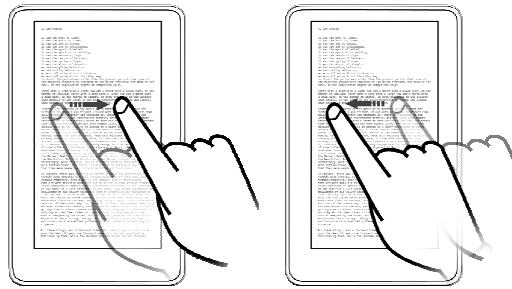


Volver a la lista de libros

Toque en la flecha "Volver" en la parte inferior de la pantalla para volver a la lista de libros.


Uso del menú de opciones de la lista de libros

Toque el botón MENU para abrir el menú de opciones de la página del libro. El menú de opciones se compone de 2 páginas e incluye varias funciones útiles.

 Menú de opciones para los libros en PDF:

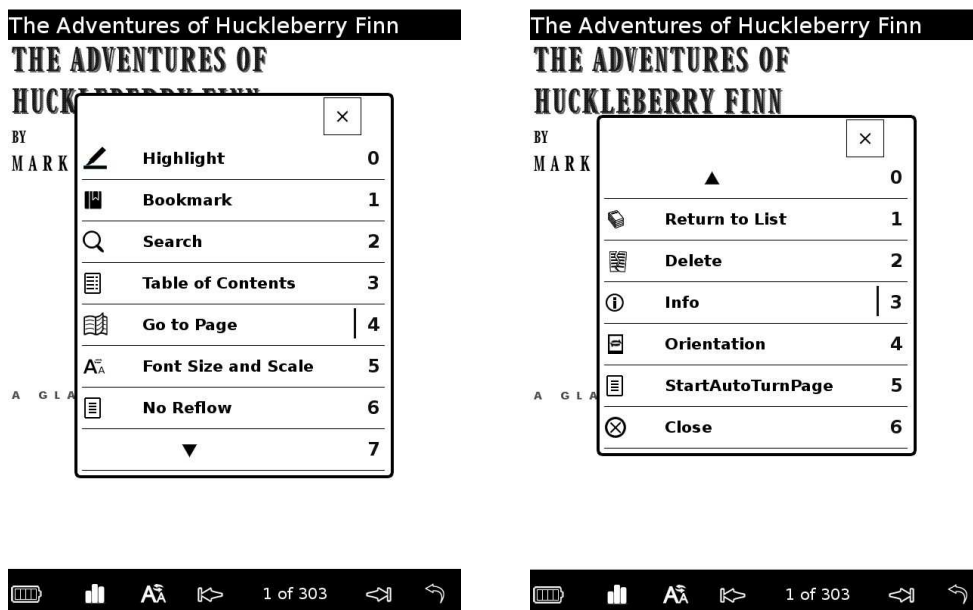

Menú de opciones para libros NO en PDF:

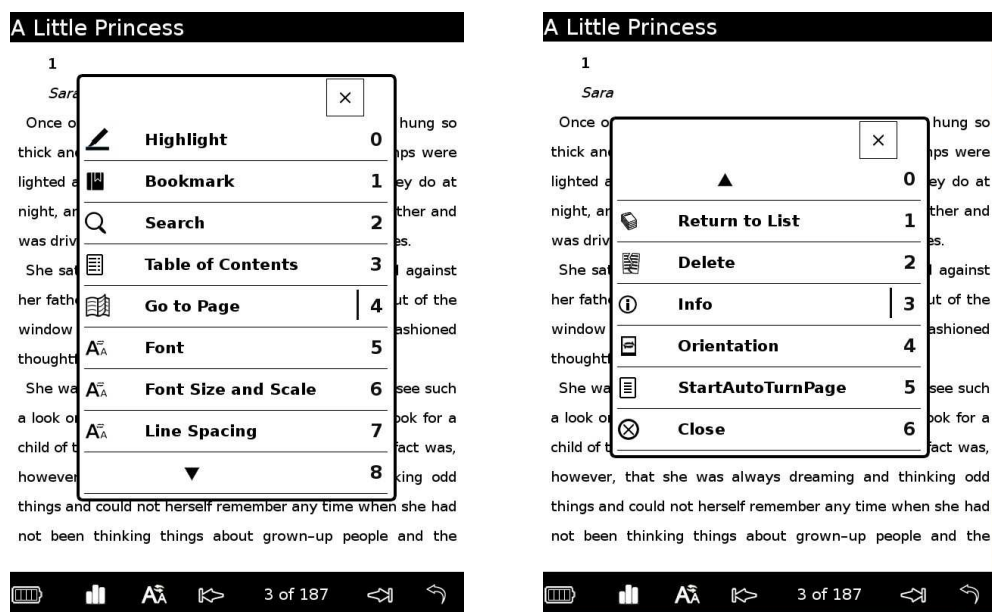 

Sugerencia: Libros no en PDF como ePub, TXT, formatos html, etc.

Opciones de la primera página:

Opción	Descripción
Resaltar	Resalta texto, muestra texto resaltado, oculta texto.
Marcador	Crea y gestiona marcadores
Buscar	Busca palabras en el libro
Tabla de contenidos	Muestra la tabla de contenidos
Ir a página	Va a la página seleccionada
Fuente	Cambia la fuente (NO en PDF)
Tamaño de la fuente	Cambia el tamaño de la fuente
Espacio entre líneas	Cambia el espacio entre líneas
Reflujo	Reflujo de texto PDF. Solo en PDF
Ir a la página 2 de opciones	Va a la segunda página de opciones

Opciones de la segunda página:

Opción	Descripción
Ir a la página 1 de opciones	Va a la primera página de opciones
Borrar	Borra un libro
Información	Muestra la información del libro
Orientación	Cambia la orientación: Horizontal/Vertical
Cerrar	Cierra este menú

Destacado de texto

Se puede destacar una palabra (s) en una página del libro.

1. En la página del libro, presione el botón de opción, a continuación, toque "Resaltar".



Opción	Descripción
Añadir	Toque para resaltar el texto. Arrastre el dedo sobre el texto.
Borrar	Toque borrar para borrar el resaltado.
Borrar todo	Toque borrar todo para borrar todo lo resaltado.
Ocultar/Mostrar	Toque para ocultar/mostrar lo resaltado.
Cerrar	Para cerrar este menú.

Nota: Mientras que el "destacado" en el menú está activo, no se puede pasar la página arrastrando en la pantalla. Tampoco a través de las flechas de paso de página. Use las flechas en la parte inferior de la pantalla para cambiar de página.

Administrar marcadores

Puede crear un marcador en una página del libro para su futura referencia. En la página del libro, pulse el botón Opciones y, a continuación, pulse "Añadir a favoritos".



Opción	Descripción
Añadir	Toque añadir para crear un marcador. El icono aparecerá en la esquina superior derecha.
Borrar	Toque borrar para eliminar un marcador.
Borrar todo	Para borrar todos los marcadores
Ver	Toque para abrir la lista de todos los marcadores.
Cerrar	Para cerrar este menú.

 
Ver marcadores

Toque en "Ver" en el menú de marcadores para abrir la lista de favoritos.



Uso del menú de opciones de la lista de favoritos

Toque el icono de la opción para abrir el menú de opciones de la lista de favoritos.

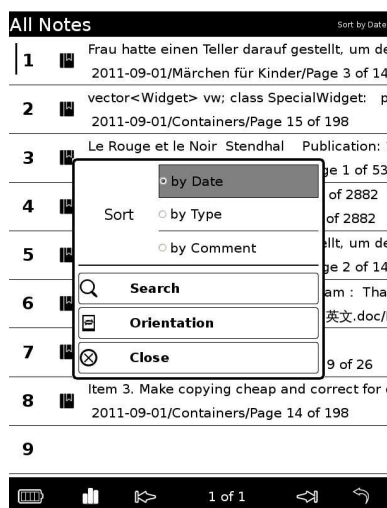

Opción	Descripción
Ordenar	Ordene la lista por fecha, tipo y comentarios.
Buscar	Busque en una nota por palabras claves.
Orientación	Cambie la orientación de la pantalla.

 
Buscar por palabra clave

Utilizando la opción "Buscar", puede buscar una palabra clave en un libro. En el menú Opciones, pulse "Buscar".

El teclado en pantalla aparece.

Escriba una palabra en el área de entrada del teclado.

Toque en una de las "flechas". Los resultados de la búsqueda se muestran en la página.

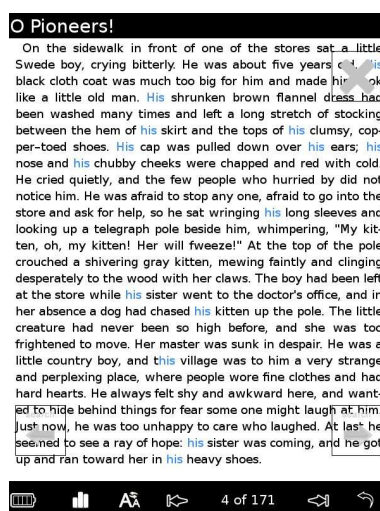

Sugerencia: Toque en las flechas grandes para continuar la búsqueda. Toque en X para cerrar la operación de búsqueda.

Uso de tabla de contenidos

1. Toque en la "Tabla de contenidos" en las opciones para abrir la tabla de la

lista de contenidos.

Title Page	Page 1
epubBooks Information	Page 2
BOOK ONE	3 items
BOOK TWO	3 items
BOOK THREE	3 items

2. Toque en el capítulo deseado para abrir la página.

Sugerencias

- "elementos" significa que el capítulo ha subcapítulos.
- Sólo se puede abrir un capítulo (sub) cuando el número de página aparece en la lista.

Enlace interno

El lector es compatible con "enlaces internos". Pulse en el enlace interno para ir a la página vinculada.


Usted puede abrir la tabla de la lista de contenido, como se ha descrito anteriormente. Como alternativa, puede tocar en la tabla de contenido en la página del libro para ir a la página deseada. (Tabla de contenidos es una especie de enlace interno desde el punto de vista técnico.)

Die Stopfnadel	31
Töpelhans	33
Fünf in der Schote	36
Das Märchen vom Sandmann	38
Die Theekanne	45
Die Blumen der kleinen Ida	46
Das kleine Mädchen mit den Schwefelhölzern	50
Die wilden Schwäne	52
Die glückliche Familie	61
Der Engel	63
Der standhafte Zinnsoldat	65
Des Kaisers Nachtigall	68
Die Schneekönigin	74

Saltar páginas

Usted puede saltar a las páginas utilizando el teclado numérico.

 
1. Toca el número de página en la parte inferior de la pantalla. El teclado numérico aparecerá:

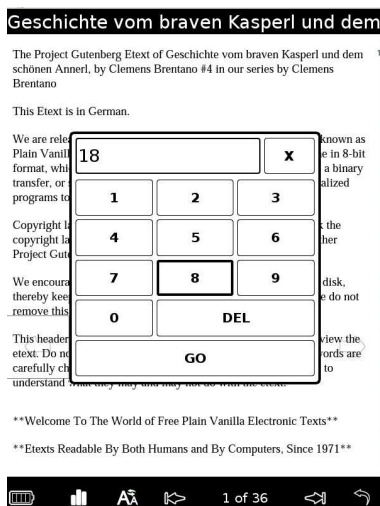

2. Pulse la tecla de número para introducir el número de página. El número de entrada se muestra en el área de entrada. Para eliminar el número, pulse la tecla "Supr".
3. Toque en "GO"

Ajuste del tipo de letra

 Puede cambiar la fuente de todos los libros que no sean PDF, como ePub, TXT, HTML usando la "Fuente" del menú.

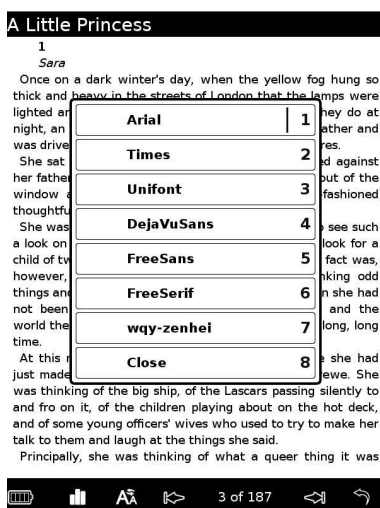


Nota: Esta opción no está disponible para los archivos PDF y PDF en el modo de reflujo.

Ampliación de la página (sólo PDF)

Es posible ampliar la página del libro PDF con el "Tamaño de la fuente y la escala" del menú. Seleccione de 10 niveles diferentes, desde 20% a 300%. Seleccione "Ajuste" para ajustar la página al tamaño de la pantalla. Automáticamente está configurado por defecto a 100%.

 
Cuatro flechas se mostrarán en la pantalla. Pulse sobre ellas para mover la página en diferentes direcciones.

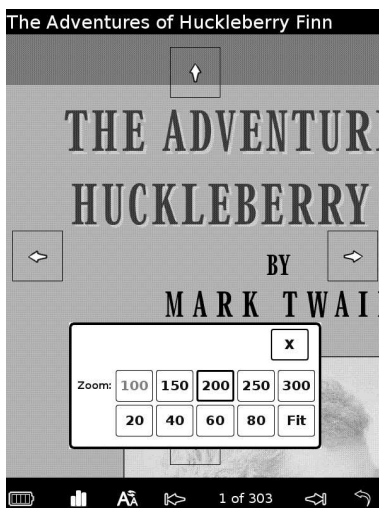

Sugerencia: Las cuatro flechas no aparecen cuando esta seleccionado "ajuste". También puede pulsar el "espacio" para activar la función Ampliar.

Ajuste del tamaño de fuente

 
Puede cambiar el tamaño de la fuente de todos los libros que no sean PDF, como ePub, TXT, utilizando el "Tamaño de la fuente y la escala" del menú. Seleccione entre 5 tamaños de texto diferentes (S, M, L, XL o XXL). "S" (tamaño original) está configurado por defecto.

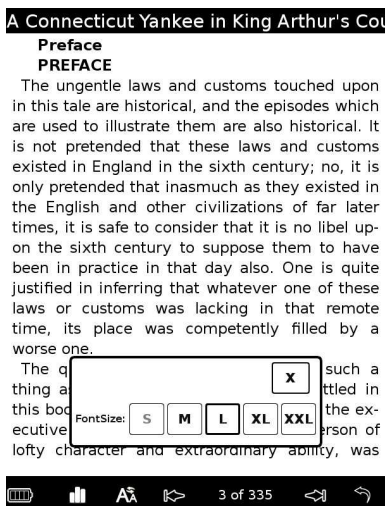

Notas: Esta opción no está disponible para los archivos PDF.
Esta opción también es aplicable a PDF en el modo de reflujo.

Ajuste la distancia entre líneas

 Puede cambiar el interlineado de los libros que no sean PDF, como ePub, TXT, HTML usando el "Interlineado" del menú. Seleccione una de las opciones.

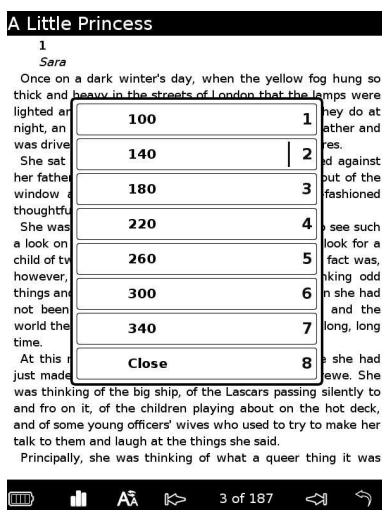

Nota: Esta opción no está disponible para los archivos PDF y PDF en el modo de reflujo.

Volver a la lista: Toque en "Volver a la lista" para ir a la lista de libros.

Borrar: Toque en "Eliminar" para eliminar el libro actual.

Información: Toque "Info" para ver los meta-datos del libro.

Orientación: Toque en "Orientación" para cambiar la orientación de la pantalla (vertical / horizontal).

Cerrar: Pulse en "Cerrar" para cerrar el menú.

CÓMO UTILIZAR ADOBE DRM

El lector es compatible con Adobe DRM protegido, archivos PDF y ePub. Al descargar archivos protegidos Adobe con DRM, por primera vez, es necesario autorizar a su lector.

Si usted no tiene un ID de Adobe, puede crear una siguiendo las instrucciones que aparecen a continuación:

1. Crear una cuenta en Adobe.com
2. Descargar e instalar Adobe Digital Editions de forma gratuita: <http://www.adobe.com/products/digitaleditions/>
3. Utilice su cuenta y contraseña para iniciar sesión en sus ediciones digitales de Adobe. Autoriza a su ordenador con un ID de Adobe
4. Comprar un libro protegido por DRM.

5. Abra el libro con sus Adobe Digital Editions
6. Conectar el lector al puerto USB.
7. Adobe Digital Editions le preguntará si desea autorizar a su lector con su ID de Adobe.
8. Decir sí.
9. Copie su libro recién comprado en el lector.
10. Si el punto 9 no funciona, desconecte el lector de USB. Conecte su lector de USB y reinicie Adobe Digital Editions.

Sugerencia: La información siguiente puede ayudarle a entender el DRM de Adobe:

<http://www.adobe.com/products/digitaleditions/faq/>

<http://www.adobe.com/products/digitaleditions/help/>

VISUALIZACIÓN DE IMÁGENES

Puede ver JPG, JPEG, GIF, PNG, BMP, TIF y archivos SVG en el lector.

 
1. Toque en "Imágenes" en el menú principal para abrir la lista de imágenes.



2. Toque en una foto de su elección.

Opción de menú imágenes

Toque el icono de la opción para abrir el menú de opciones.

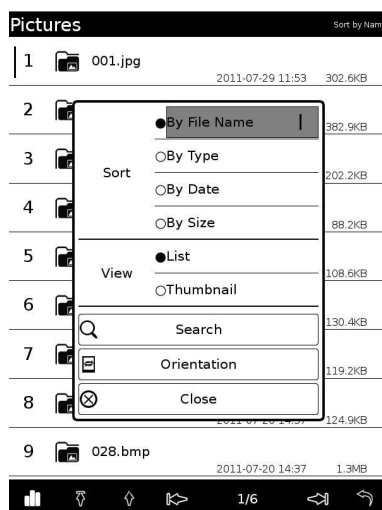


Opción	Descripción
Ordenar	Ordenar las "Imágenes" por nombre de archivo, tipo, fecha, tamaño.
VerView	Cambia el formato de visualización en lista o en miniatura.
Buscar	Busca una imagen deseada por palabras clave.
Orientación	Cambia la orientación de la pantalla (vertical / horizontal).
Cerrar	Cierra este menú.

Cambio del formato de visualización

Usted puede optar por mostrar el formato, ya sea en "Lista" o vista en "miniatura".

 En el menú Opciones, pulse en "miniatura" de "Vista" para cambiar el formato de visualización de la lista.

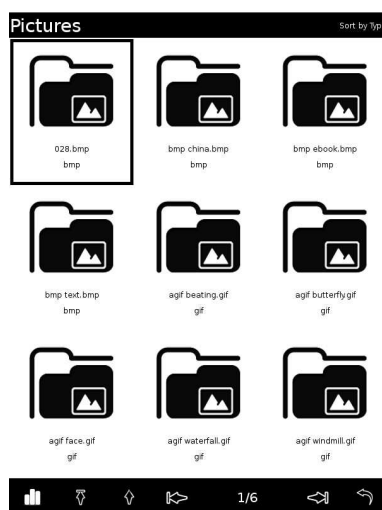


Nota: Las imágenes hasta un tamaño de archivo de 1GB se muestran en el lector sin problemas, sin embargo, no se garantiza que se puedan mostrar todas las imágenes, dependiendo de su tamaño.

Buscando imágenes


Hay varias maneras de navegar por las fotos.

 1. Con los botones de 3 y 4.
2. Usa las flechas izquierda y derecha en la parte inferior de la pantalla.
3. Iniciar una presentación.
4. Arrastrando en la pantalla.

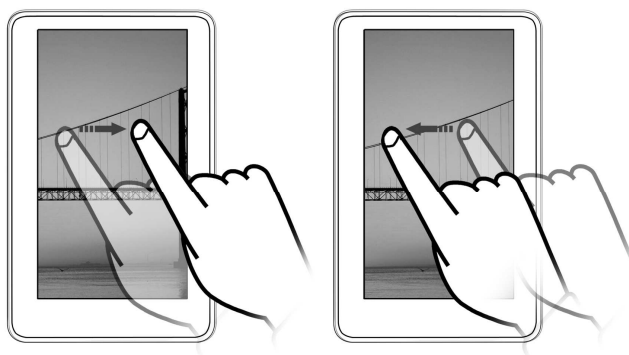

Operaciones con el visor de imágenes

 En el visor de imágenes, se pueden realizar las siguientes operaciones.

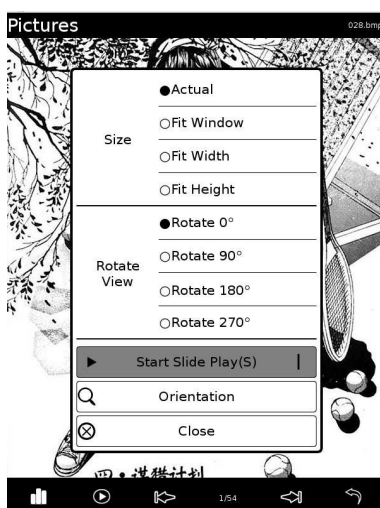

Opción	Descripción
Tamaño	Cambia la foto de tamaño: Actual: Muestra el tamaño de la imagen original. En ventana: Escalas del tamaño de la imagen a la pantalla. Ajustar ancho: Escala el tamaño de la imagen a la anchura de la pantalla. Encajar altura: Aumenta el tamaño de la imagen a la altura de la pantalla.
Rotar	Gira la imagen 0°, 90°, 180° and 270°.
Pase diapositivas	Reproduce las imágenes de forma automática
Orientación	Cambia la orientación de la pantalla (vertical/horizontal).
Cerrar	Cierra este menú.

VISOR DE COMICS

Puede ver los archivos CBR y CBZ en el lector.

 
1. Toque en "Comics" para abrir la lista de los comics.



2. Toque en un cómic de su elección.

Opciones del menú comics

Toque el icono de opciones para abrir el menú de opciones.

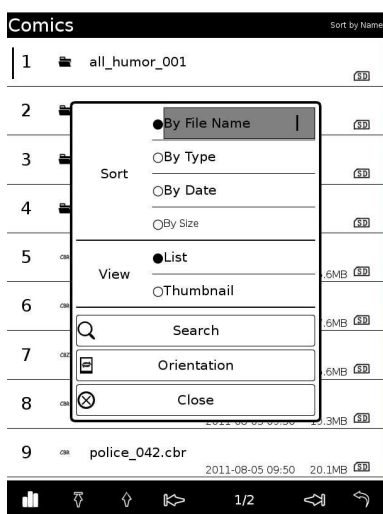


Opción	Descripción
Ordenar	Ordena los "Comics" la lista por nombre de archivo, tipo, fecha, tamaño.
Ver	Ver Cambia el formato de visualización de la lista a la lista o en miniatura.
Buscar	Busca por palabras clave.
Orientación	Cambia la orientación de la pantalla (vertical / horizontal).
Cerrar	Cierra este menú.

Cambio del formato de visualización

Puede optar por mostrar el formato de lista, ya sea en la "Lista" o vista en "miniatura".

 
En el menú Opciones, pulse en "miniatura" de "Vista" para cambiar el formato de visualización de la lista.

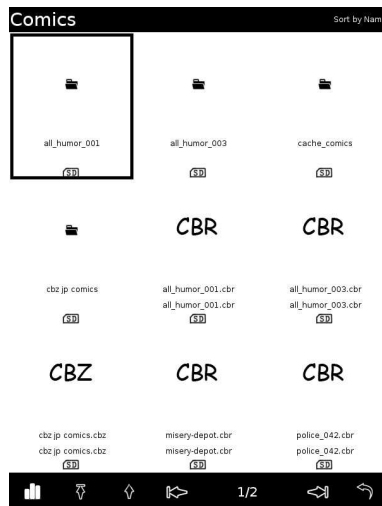

Navegación en comics


Hay varias maneras de navegar por los comics:

 1. Con los botones de 3 y 4.
2. Usa las flechas izquierda y derecha en la parte inferior de la pantalla.
3. Iniciar una presentación.
4. Arrastrando en la pantalla.

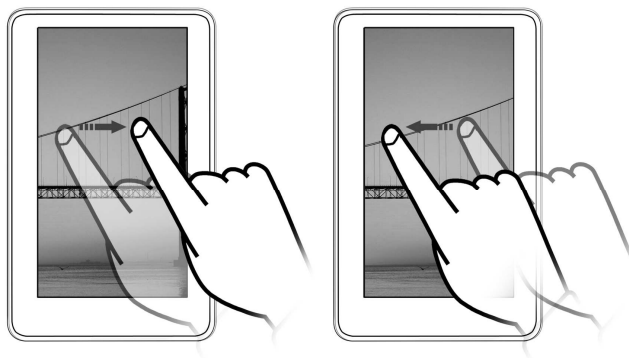

Operaciones en el visor de comics

 En el visor de los comics, puede realizar las siguientes operaciones:

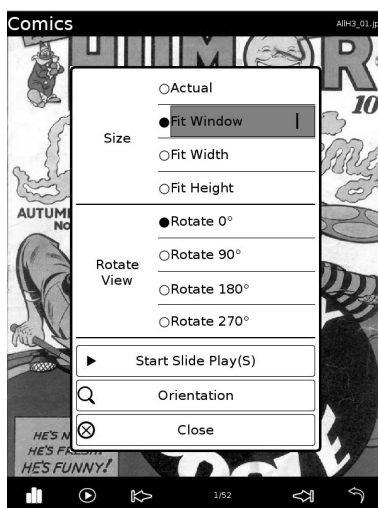


Opción	Descripción
Tamaño	Cambia la imagen de tamaño: Actual: Muestra el tamaño de la imagen original. En ventana: Escalas del tamaño de la imagen a la pantalla. Ajustar ancho: Escala el tamaño de la imagen a la anchura de la pantalla. Encajar altura: Aumenta el tamaño de la imagen a la altura de la pantalla.
Rotar	Gira la imagen 0°, 90°, 180° and 270°.
Pase diapositivas	Reproduce las imágenes de forma automática
Orientación	Cambia la orientación de la pantalla (vertical/horizontal).
Cerrar	Cierra este menú.

REPRODUCCIÓN DE ARCHIVOS DE AUDIO

Puede reproducir archivos MP3 en el lector. También puede leer libros y ver imágenes mientras escucha archivos de audio. Los archivos de audio se pueden reproducir a través del altavoz incorporado o a través de auriculares.

 1. Toque en "Audio" para abrir la lista de canciones. Toque en una canción de su elección.

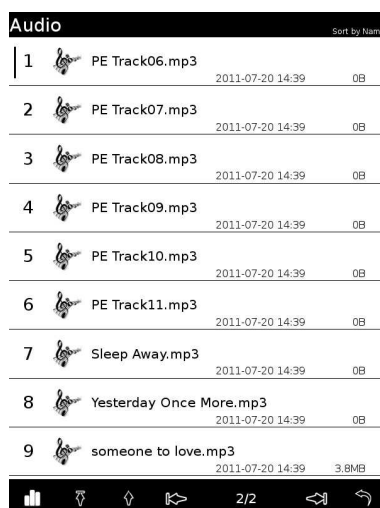


Las miniaturas de imágenes (si es contenida en los archivos de música) se mostrarán en la lista.

2. En la lista de "Audio" toque en la pista deseada.

Nota: El lector sólo es compatible con archivos MP3 con etiquetas ID3 integradas. ID3 permite reproducir la información como el título, artista, álbum, número de pista, y otra información sobre el archivo MP3 que se almacenan en el propio archivo.

Opciones del menú de audio

 
Toque el icono de la opción para abrir el menú de opciones:

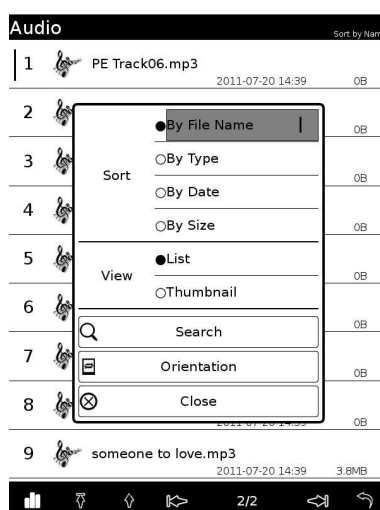

Opción	Descripción
Ordenar	Clasificar los archivos de audio por nombre de archivo, tipo, fecha, tamaño.
Ver	Cambia el formato de visualización de la lista a la lista o en miniatura.
Buscar	Busca una pista deseada por palabras clave
Orientación	Cambia la orientación de la pantalla (vertical / horizontal).
Cerrar	Cierra este menú.

Operaciones en el reproductor de audio

 En la pantalla de reproducción, puede realizar las siguientes operaciones:

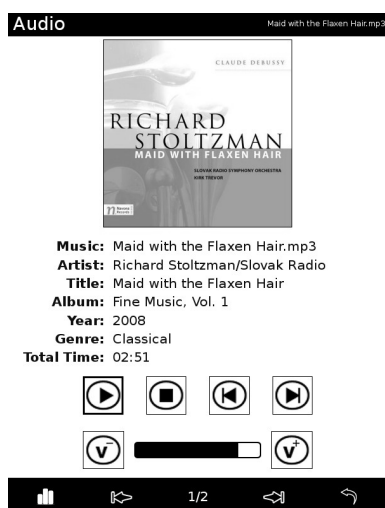






El reproductor de audio muestra la siguiente información:

- El nombre del archivo de audio.
- El tiempo total del archivo de música.


El reproductor de audio muestra la siguiente información (si es contenida en los archivos de música):

- La imagen del álbum.
- El nombre del artista.
- El nombre de la pista.
- El nombre del álbum.
- El año de la publicación.
- El género de la música.

Iconos	Descripción
	Reproduce música
	Para la reproducción
	Pista anterior
	Pista siguiente
	Ajuste de volumen

Otras características del reproductor de audio

 Toque el icono de la opción para abrir el menú de opciones:

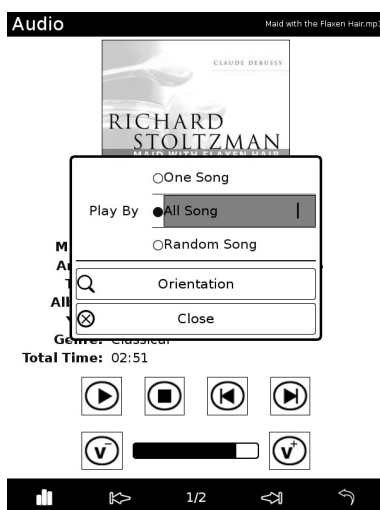


Opción	Descripción
Play By	Una Canción: Reproduce la pista actual repetidamente Todas las canciones: Reproduce todas repetidamente Al azar: Reproduce todas al azar
Orientación	Cambia la orientación de la pantalla (vertical / horizontal)
Cerrar	Cierra este menú

CONFIGURACIÓN

Puede configurar varios ajustes en el menú "Configuración".

 1. En la ventana principal, pulse el icono "Configuración".

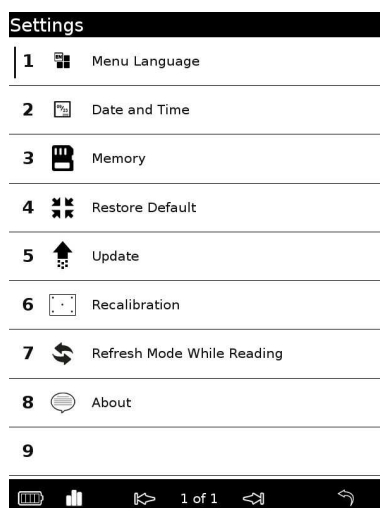

2. En el menú "Configuración", seleccione el elemento de configuración que desea cambiar.


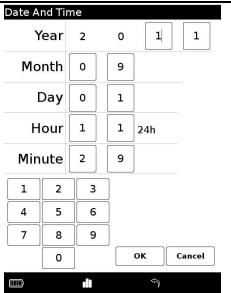 
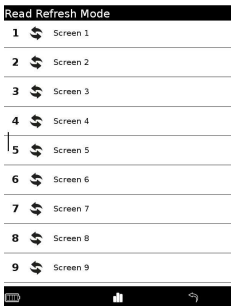 
- Las ilustraciones a continuación muestran la "Fecha y Hora".

3. Toque en la parte o el campo para cambiar el ajuste. Para introducir un número, pulse la tecla numérica.

4. Pulsa "Aceptar" para confirmar la configuración o en "Cancelar" para cancelar el ajuste.

Configuración de opciones de menú

En el menú "Configuración", puede configurar los siguientes ajustes.

Opción		Descripción
Idioma		Seleccione el idioma deseado
Fecha y hora		Establezca la fecha y hora.
Memoria		Muestra información sobre la memoria interna y la tarjeta microSD
Valores por defecto		Restaura a los valores de fábrica
Calibrar		Para calibrar la pantalla táctil
Modo de refresco mientras lee		Le permite ajustar después el número de páginas y actualiza la pantalla durante la lectura. El valor predeterminado es 1
Sobre		Muestra la versión del firmware del lector, el nombre del producto, información de licencia, etc.

OTRA INFORMACIÓN

Notas sobre la eliminación del lector

La batería recargable incorporada del Reader es reciclable. No retire la batería usted mismo, consulte a su distribuidor local.

Precauciones

Eliminación de equipos eléctricos y electrónicos (Aplicable en la Unión Europea y otros países europeos con sistemas de recogida selectiva de

residuos)

El símbolo de la papelera en el producto o en su embalaje indica que este producto no puede ser tratado como residuos domésticos. En su lugar, se debe entregar al punto de recogida para el reciclaje de aparatos eléctricos y electrónicos. Al garantizar que este producto se desecha correctamente, usted ayudará a evitar posibles consecuencias negativas para el medio ambiente y la salud humana, que podrían derivarse de la incorrecta manipulación de este producto. El reciclaje de materiales ayuda a conservar los recursos naturales. Para obtener información más detallada sobre el reciclaje de este producto, póngase en contacto con el ayuntamiento, su punto de recogida más cercano o el establecimiento donde adquirió el producto.

Seguridad

- No inserte objetos extraños en la toma DC IN del lector.
- Asegúrese de no cortocircuitar los terminales del Lector con objetos metálicos.

Acumulación de calor

El calor puede acumularse en el lector durante la carga o si se usa durante un período prolongado de tiempo.

Auriculares

Seguridad vial: No utilice los auriculares mientras se conduce, en bicicleta o maneja un vehículo motorizado. Se puede crear un peligro para el tráfico y es ilegal en muchas áreas. También puede ser potencialmente peligroso escuchar a un volumen alto mientras camina, especialmente en los cruces peatonales.

Cuidado de los oídos: Evite el uso de los auriculares a un volumen alto. Los expertos en audición desaconsejan el uso continuo a un volumen alto. Si experimenta un zumbido en los oídos, reduzca el volumen o deje de utilizarlos.

Respeto a los demás: Mantenga el volumen a un nivel moderado. Esto le permitirá escuchar los sonidos del exterior y será considerado con la gente que te rodea.

Notas sobre el uso

- La sustitución o reparación de la pantalla táctil si se rompe o se raya durante su uso no está cubierto por la garantía.
- No deje caer o someter el lector a golpes fuertes.
- Nunca exponga el lector a condiciones extremas de luz, temperatura, humedad o vibraciones.
- Nunca envuelva el lector en cualquier cosa cuando se utiliza con el adaptador de CA. La acumulación de calor en el lector puede causar una

avería.

- No coloque objetos pesados en la parte superior del lector o de un golpe fuerte para el lector. Puede causar un mal funcionamiento o daños.
- No deje el lector sobre una superficie inestable.
- No exponga el lector al agua. El lector no es impermeable.
- No olvide seguir las siguientes precauciones:

Tenga cuidado de no dejar caer al lector en un fregadero u otro recipiente lleno de agua.

No utilice el lector en lugares húmedos o mal tiempo, como la lluvia o la nieve.

No deje que el lector se moje.

Si toca el lector con las manos mojadas, o pone el lector en una prenda de ropa mojada, el lector se puede mojar y esto puede causar un mal funcionamiento.

La pantalla táctil es muy delicada; maneje el lector con el debido cuidado.

Si, en función de los tipos de texto y caracteres, el texto que se muestra en el lector no se visualiza correctamente en el dispositivo puede ser debido a:

- La capacidad del lector.
- El lector no está funcionando normalmente.
- Información sobre el contenido está escrito en el lenguaje que no es compatible con el lector.

Notas sobre tarjetas de memoria

Micro SD (TF) cumple con la norma compacta tarjeta de memoria y se usa comúnmente como un medio de almacenamiento para cámaras digitales.

Mantener una tarjeta de memoria en su estuche cuando vaya a transportar o almacenar la misma.

No toque el conector de una tarjeta de memoria con las manos de oso u objetos metálicos.

No doble, deje caer ni someta una tarjeta de memoria a golpes fuertes.

No desarmar o modificar una tarjeta de memoria.

No permita que una tarjeta de memoria que se moje.

Retire la tarjeta de memoria o de apagar el lector al leer o escribir datos.

Utilice el lector en el lugar donde la electricidad estática o ruido eléctrico está presente.

No use una etiqueta que no sea el específico en el área de la etiqueta.

No utilice ni guarde el lector en un lugar expuesto:

- Temperatura extrema alta, como en un coche al sol caliente.
- La luz solar directa.
- La alta humedad o lugares con sustancias corrosivas.

Acerca de la limpieza

Limpie el lector con un paño suave, tal como un paño de limpieza para lentes.

Si el lector llega a acumular mucha suciedad, límpielo con un paño suave

ligeramente humedecido con agua o una solución detergente suave.
No utilice ningún tipo de estropajo abrasivo, detergente en polvo ni disolventes, como alcohol o benceno, ya que pueden dañar el acabado de la caja.

Tenga cuidado de no dejar que entre agua en el lector.
Limpie la clavija de los auriculares de forma periódica.

ESPECIFICACIONES

BTB-600-T

Alimentación: Batería recargable: 3.7V DC

Adaptador de CA: DC 5V 2ª USB

Disponible para el usuario la capacidad de aproximadamente 3 GB en el caso de memoria de 4Gb incorporada.

La capacidad de memoria disponible del lector puede variar según versiones.

"Las especificaciones técnicas pueden cambiar sin previo aviso"

 
IMPORTADO:

I.R.P., S.L.

Avda. Santa Clara de Cuba 5

41007 Sevilla

Spain

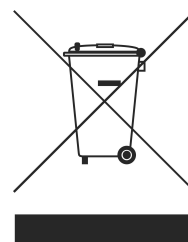

DECLARACIÓN DE CONFORMIDAD

I.R.P., S.L. declara bajo su responsabilidad que el aparato indicado cumple los requisitos de las siguientes directivas:

DIRECTIVAS EMC

EN55022:2006+A1:2007+A2:2006

EN55024:1998+A1:2001+A2:2003

EN61000-3-2:2006

EN61000-3-3:2008

Descripción del aparato:

Modelo BRIGMTON BEB-600-T

Lector de archivos de texto

Importador: I.R.P., S.L.

Dirección: Avda. Santa Clara de Cuba 5, 41007, Sevilla.



BEB-600-T

EBOOK READER-TOUCH SCREEN 6"-MP3

Instruction Manual


Table of Contents

Table of Contents	
Getting started	
Parts and Controls	
Turning on/off the Reader	
Power Management of the Reader	
Suspend and Wake up Mode	
Charging the Reader	
To check the battery status	
How to Use the Touch Screen (optional)	
How to Use the Keyboard	
How to Use Icons	
How to Use the Main Menu	
How to use the on-screen keyboard	
Inserting a memory card	
Removing a memory card	
Reading Books	
Reading Books	
Using the Option menu of the book list	
Switching the list display format	
Searching for a book with a keyword	
Operations on the book page	
Turning a page	
Going back to the book list	
Using the Option menu of the book page	
Highlighting text	
Managing bookmarks	
Viewing bookmarks	
Using the Option menu of the bookmark list	
Searching keyword	
Using table of contents	
Internal link	
Jumping to pages ("Go to Page")	
Adjusting the font	
Magnifying book page (Zoom in/out), PDF Only	
Adjusting the font size	
Adjusting the line spacing	
Return to List	
Delete	
Info	
Orientation	
Close	
How to use Adobe DRM	

Viewing Pictures.....	
Viewing Pictures	
Option menu of the "Pictures" list.....	
Switching the list display format.....	
Browsing pictures.....	
Operations on the Picture viewer.....	
Comics viewer	
Comics viewer.....	
Option menu of the "Comics" list.....	
Switching the list display format.....	
Browsing comics	
Operations on the Comics viewer.....	
Playing Audio Files.....	
Playing audio files	
Option menu of the "Audio" list	
Operations on the Audio player	
Further features of the audio player.....	
Settings.....	
Changing Settings.....	
Settings menu items	
Other Information	
Notes on Reader Disposal.....	
Precautions.....	
On Safety	
On heat build-up.....	
On the headphones	
Note on use	
Notes on memory cards	
On Cleaning	
Specifications	

Getting started

 2.1 Parts and Controls

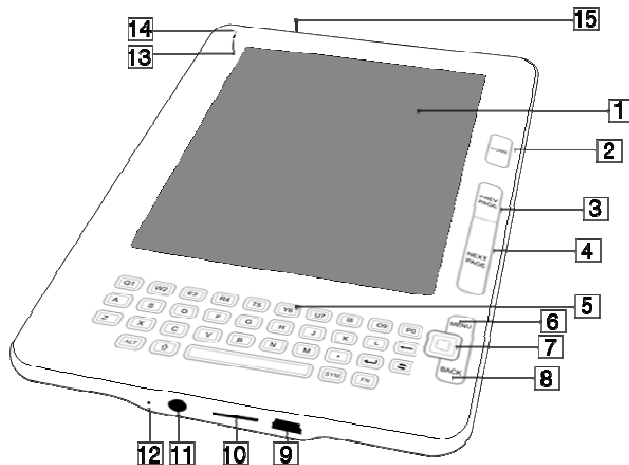

1. EINK panel with a touch screen (optional)
The touch screen gives you simple access to the various functions on the Reader.
2. Home button
3. Previous page button
4. Next page button
5. Keyboard
6. Menu button
7. 5-way controller
8. Back button
You can leave the current window or menu by clicking "Back button".
9. USB connector
Used to connect the USB cable (supplied).
10. Micro SD (TF) Memory Card slot
Used to insert a Micro SD (TF) Memory Card (optional).
11. (Headphones) jack
Used to connect headphones (optional).
12. Microphone input
Reserved for the future. Not in use now.
13. Green LED
Indicates that the Reader is in operation. It goes off when the Reader is switched off or the Reader is in power saving mode. The user interface is shown on the screen when the Reader is in power saving mode. The screen is blank when the Reader is switched off. Use any key to reactivate the Reader. Tapping on the touch screen does not reactive the Reader.
14. Red LED
Indicated that the Reader is connected to an AC outlet or to a computer via USB.

The battery is being charged. It goes off when charging is complete.

15. Power on switch and key lock

16. Reset button

Resets the Reader if no operation is possible. The Reset button is located on the backside of the Reader.

2.2 Turning on/off the Reader

Slide and hold the Power switch for 2 seconds to turn on the Reader. Make sure to turn on the Reader before connecting to your computer.

Slide and hold the Power switch again to turn off the Reader.

Notes

- When turning on the Reading the Reader starts to scan all books in the Reader. Depending on the total number of books stored on the internal flash memory and external Micro SD (TF) card, the scanning process can take several minutes. The scanning process is necessary for the sorting operations and displaying the book cover in the book list.
- The scanning operation starts automatically in the following cases:
 - After switching on the device;
 - An external Micro SD (TF) card has been removed or inserted;
 - A book of supported formats has been downloaded and you exit the browse.
 - After disconnecting the Reader from the USB port of a computer.

2.3 Power Management of the Reader

The Reader has a Power Management feature to avoid unnecessary battery consumption. At purchase, the Power Management is activated. The Power Management operates as follows:

After 15 minutes of inactivity, the Reader switches off itself automatically. You can activate/deactivate the Power Management from the "Power Management" option in the "Settings" menu.

2.4 Suspend and Wake up Mode

In order to save energy, the Reader goes to the "sleep" (suspend mode) after 3 seconds inactivity of keyboard or touch screen. Press any key to reactivate (wake up) the Reader again.

Hint:

Tapping on the touch screen does not reactive the Reader.

2.5 Charging the Reader

You need to charge the Reader when using it for the first time, or when the remaining battery power is low. Charge the Reader in one of the following ways.

- Connect to an AC outlet using the AC Adapter with 5V 1.5A or 5V 2A for the Reader. It will take approximately 5 hours to fully charge the battery.
- Connect to a computer via USB. The charging through USB takes significantly more time than through an AC outlet.

2.6 To check the battery status

You can verify the remaining battery power by checking the battery indicator in the bottom left of the screen. Charge the battery when remaining power is low (the fewer black segments indicated, the lower the remaining power).



Notes

- While you use the delivered charger and USB cable to charge the Reader, you can operate the Reader.
- While connected to your computer via USB, you cannot operate the Reader.
- Do not leave the Reader connected to a notebook computer which is not connected to an AC outlet for an extended period. It will consume the battery of the notebook computer.
- Connection via an extension cable or USB hub is not guaranteed. Connect the USB cable directly to the computer.
- While the Reader is connected to your computer, do not turn on, restart, wake up from sleep mode, or shut down the computer. These operations may cause the Reader to malfunction. Disconnect the Reader from the computer before performing these operations.

2.7 How to Use the Touch Screen (optional)

Using the optional touch screen, you can perform various operations with a finger or with a stylus.

Note

- When you use the stylus, make sure to use the pointed end of it for tapping, dragging, or drawing on the touch screen.

Tapping

By tapping on the touch screen, you can select an item on the menu or option list, etc.

Dragging

By dragging on the touch screen, you can turn a page or (de)select a text to highlight.

Dictionary (Optional)


When reading a book activate the built-in dictionary by double clicking on a letter of a word princely.

Hint

The touch screen is optional.










2.8 How to Use the Keyboard

Use the keyboard to enter text. There are some special functions keys:

Icons	Descriptions
FN	Switches the screen orientation (vertical/horizontal).
	Refresh the screen.
Home	Click it to go to the main menu.
PREV PAGE	Click it to go to the previous book page or list page.
NEXT PAGE	Click it to go to the next book page or list page.

MENU	Click it to open the option of each window.
BACK	Click it to go leave the current window.
Space	Click it to open the font size and zoom menu when reading a book.


2.9 How to Use Icons

Icons	Descriptions
	Options, located almost in all windows. Tap it to open the option of each window.
	Turn page, located in Book/Picture/Comics/Music/All Notes list; Book/Picture/Comics/Music/All Notes viewer or player
	Go back, same function as Button 2. Tap it to leave the current window, menu or dialog.
	Search keyword, appears when searching a book for keywords ("Search"). Left arrow (Previous Search): To go to the previous page containing your input word(s) Right arrow (Next Search): Tap it to skip to the next page that contains the input word(s). Cross: Tap it to close the "Search" function. Appears only in book page.
	Tap them to move the content in a book page in four directions when the zoom function is activated. Appears only in book page.
	Tap them turn book pages. Appears only in book page.
	Indicates that a bookmark is created on a page. Appears only in book page.
	Tap it to open the font size and zoom menu when reading a book. Appears only in book page.
	Tap it to open the on-screen keyboard. Appears whenever an input is required.

2.10 How to Use the Main Menu

The main menu is the starting point to read/play/view content, go online and configure settings. You can select menu items by tapping them.

 Bookcase

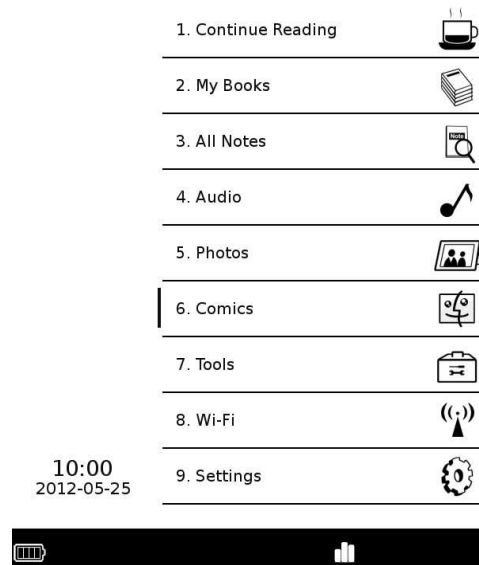


The main menu contains the following functions:

- Continue Reading
Tap "Continue Reading" to continue reading from the last displayed page. The last displayed page appears.
- My Books
Tap "My Books" to open the book list. Tap a book of your choice. You can view EPUB, PDF, TXT, HTML, and FB2 files on the Reader.
- Pictures
Tap "Pictures" to open the picture list. Tap a picture of your choice. You can view JPG, JPEG, GIF, PNG, BMP, TIF and SVG files on the Reader.
- Audio
Tap "Audio" to open the song list. Tap a song of your choice. You can play back MP3 files on the Reader. You can also read books and view pictures or comics while listening to audio files. Audio files can be played back through the built-in speaker or you can connect the optional headphones to the headphone jack.
- Comics
Tap "Comics" to open the comics list. Tap a comic of your choice. You can view CBR and CBZ files on the Reader.
- Wi-Fi & Internet
Tap "Wi-Fi" to connect your Wi-Fi enabled Reader to your Wi-Fi access points and go online.
Please pay attention that your Reader is a mobile device with limited computing power. Its CPU and internal memory (RAM) are not as powerful and large as your desktop computer does. Your Reader supports the latest generation of the Wi-Fi standard 802.11b/g/n. However, the download speed is in some cases limited, especially when the web sites are built with complicated structures and containing a lot of links. The main purpose of the Wi-Fi in your Reader is to download ebook files from the dedicated web sites.
- Settings
Tap "Settings" to open the setting items you want to change. You can configure

various settings in the "Settings" menu.

2.11 How to use the on-screen keyboard

 Use the on-screen keyboard of the Reader to enter words.

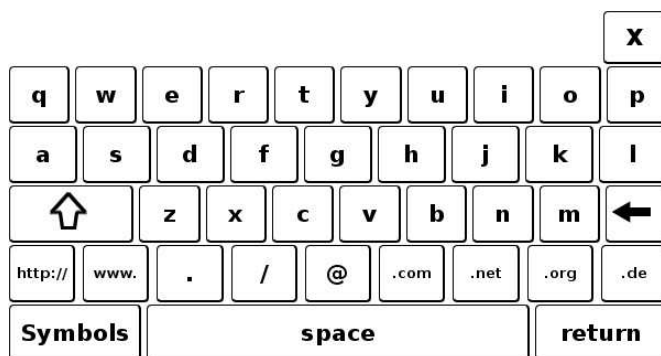

Hints

Tap the "SYM" key to display symbols and numeric keys.

Tap the "CLR" key to delete your words in the input box.

The design of the on-screen keyboards may vary depending on the function.

2.12 Inserting a memory card

The Reader supports Micro SD (TF) memory card.

Notes

- Do not remove a memory card from the memory card slot while the data on the memory card is being edited. Otherwise, edited data will not be saved.
- SD Memory Card of up to 16 GB has been tested to work with the Reader; however, not all SD Memory Cards are guaranteed to work.
- When inserting the memory card into the Reader, it may take time for the Reader to recognize the content files in the memory card if the number of the content files stored on the memory card is large.
- Be sure to insert the memory card in the correct direction. Forced insertion may damage the slot.
- Do not insert an incompatible memory card, as it may cause malfunction.
- Do not use a deformed memory card or adapter.
- If your Reader does not recognize the memory card please switch off the Reader and insert the memory card. Switch on the Reader again.

2.13 Removing a memory card

Gently push in the memory card. You will hear a click, and the memory card should pop out. Remove the memory card squarely from the slot.

Notes

- Do not remove a memory card or turn off the Reader while reading or writing data as data may be damaged.

Reading Books

2.14 Reading Books

Follow the steps below to find books.

1. In the main menu, tap "My Books".

Hints

- If you want to continue reading from the last displayed page, tap "Continue Reading" in the main menu. The last displayed page appears.
2. Tap the desired book on the list.

 


Hints

- "SD" means that books are stored on the external Micro SD (TF) card.
- The number of the list pages is displayed at the bottom of the screen. If more than 9 books are stored, the total number of list pages becomes more one, e.g. 1 of 2, indicating that the book list contains totally two pages and the first page is displayed.
- The books are listed in various ways. If your desired book is not displayed in the current list page, go to the next page or use the sort or search option to find the book. You turn the list page by tapping the left and right arrows at the bottom of the screen.
- If you have read the book before, the last displayed page of the book appears when you open the book.

2.15 Using the Option menu of the book list


In the book list, click the Options button to open the Option menu.

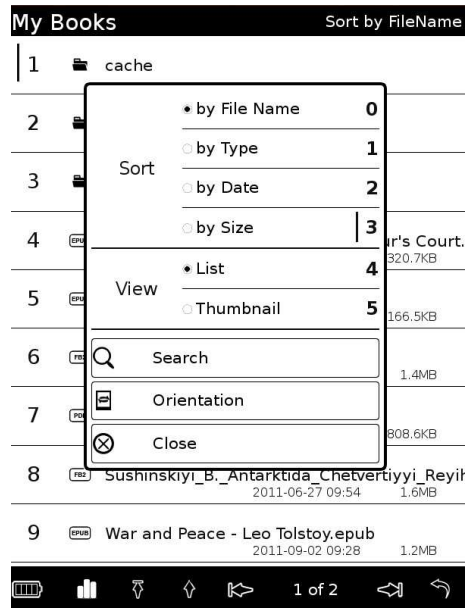

Option item	Description
Sort	Sorts the "My Books" list by file name, type, date or size.
View	Switches the list display format to list or thumbnail.
Search	Searches a desired book title by keyword
Orientati on	Switches the screen orientation (vertical/horizontal).
Close	Closes the menu.

Switching the list display format

 You can choose to display the list format in either "List" or Thumbnail" view. In the Option menu, tap "Thumbnail" of "View" to switch the list display format.

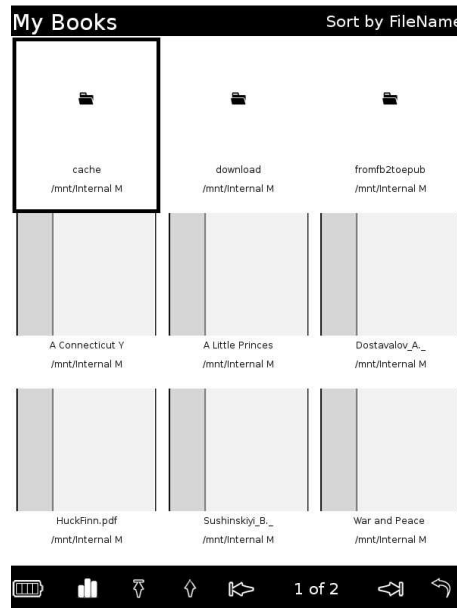


Searching for a book with a keyword

Using the on-screen keyboard, you can search for a desired book, note or word from the Option menus.

Here the instruction to search the "My Books" list for a book is given as an example. You can search for a book by entering the book title or author.

1. In the Option menu, tap "Search" to display the keyboard.

 The on-screen keyboard appears.

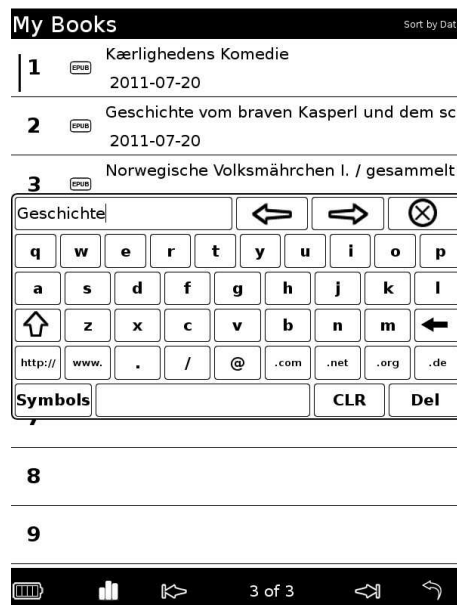

2. Enter a word in the input area of the keyboard.
The word appears in the input area.
3. Tap one of the "arrows" in the on-screen keyboard.
The search results list appears.
Books including the input word in their titles/authors are displayed.



Hint

- If there are more results in the results list you can repeat the "Search" function.
4. Tap the desired book.
The book page appears.

Hints

- You can perform other search operations in the same manner as above after selecting "Search" in each Option menu.

2.16 Operations on the book page

On the book page screen, you can perform the following operations:

 
- Turning a page
- Jumping to pages ("Go to Page")
- Magnifying book page (Zoom in/out), PDF only
- PDF reflow
- Changing font (not for PDF)
- Adjusting the font size, line space (not for PDF)
- Going back to the book list
- Creating and managing book marks
- Search keywords
- Highlighting text
- Viewing the table of contents (ToC)
- Viewing the book information
- Switching the screen orientation (vertical/horizontal)

Turning a page

There are various ways to turn a page.

1. Using the buttons 11 and 12 located on the top right side of the Reader.

2. Dragging on the upper half of the screen.

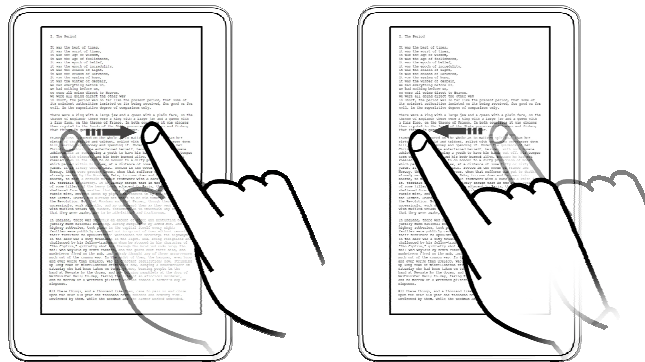

Going back to the book list


Tap the “Go back” arrow at the bottom of the screen to go back to the book list.

2.17 Using the Option menu of the book page

Tap the Option icon to open the Option menu of the book page.

The Option menu consists of 2 pages and includes various useful features.

 The Option menu for PDF books:

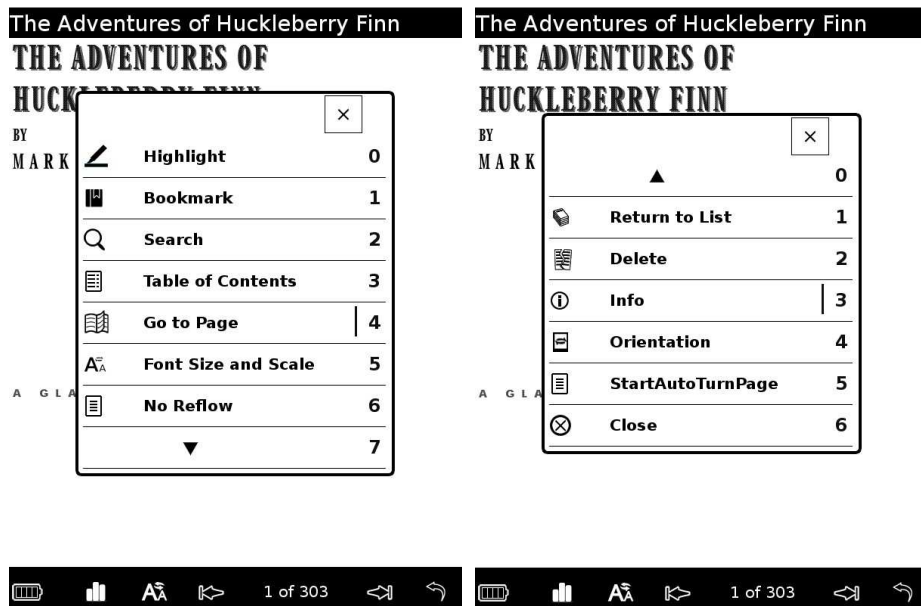

The Option menu for non-PDF books:



Hint

Non-PDF books are e.g. books in epub, txt, html formats, etc.

Options in the 1st page

Option item	Description
Highlight	Highlights text, hides and displays highlighted text.
Bookmark	Create and manages bookmarks.
Search	Searches words in the book.
Table of contents	Displays the table of contents.
Go to Page	Displays the Page Jump panel.
Font	Changes the font, not for PDF.
Font Size and Scale	Changes the font size or scale the page.
Line Spacing	Changes the line spacing
Reflow	Reflow PDF text. This feature is only available for PDF files.
Go to Option page 2	Go to the Option page 2.

Options in the 2nd page

Option item	Description
Go to Option page 1	Go to the Option page 1.
Delete	Deletes the current book
Info	Displays the book information.
Orientation	Switches the screen orientation (vertical/horizontal).
Close	Closes the menu.

Highlighting text

You can highlight a word(s) on a book page.

1. In the book page, press the Option button, then tap "Highlight".



Option item	Description
Add	Tap it to highlight text. Drag across the text on the book page. The text is highlighted.
Delete	Tap it to delete the highlight. Tap a part of the highlighted text.
Del All	Tap it to delete all highlighted parts in the book.
Hide/Display	Tap it to hide and display the highlight.
Close	Closes the menu.

Note

- While the "Highlight" menu is active, you cannot turn the page by dragging on the screen. The two big arrows for turning page disappear either. Use the arrows at the bottom of the screen to turn page.

Managing bookmarks

You can create a bookmark on a book page for your future reference. In the book page, press the Option button, and then tap "Bookmark".



Option item	Description
Add	Tap it to create a bookmark. A bookmark icon appears at the upper right corner of the page.
Delete	Tap it to delete the bookmark on the page.
Del All	Tap it to delete all bookmarks in the book.
View	Tap it to open the list of all bookmarks. The list displays bookmarks of all the books stored on the Reader.
Close	Closes the menu.

Viewing bookmarks

Tap “View” in the bookmark menu to open the bookmark list.




Hint

Notes include bookmarks, hand notes, and text memo. Hand notes and text memo will be available in the future.

Using the Option menu of the bookmark list

Tap the Option icon to open the Option menu of the bookmark list.

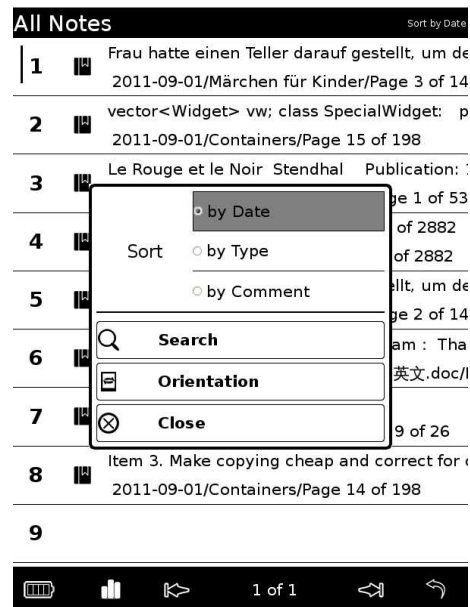 


Option item	Description
Sort	Sorts the notes list by file date, type and comments.
Search	Searches a desired note by keyword.
Orientation	Switches the screen orientation (vertical/horizontal).

Searching keyword


Using the "Search" option, you can search a keyword in a book. Here the instruction to search a keyword in a book is given as an example.

In the Option menu, tap "Search" to display the keyboard.

 The on-screen keyboard appears.

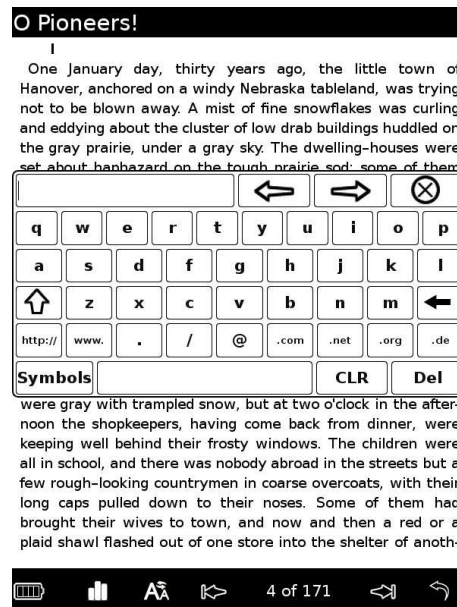

 5. Enter a word in the input area of the keyboard.
The word appears in the input area.
6. Tap one of the “arrows” in the on-screen keyboard.
The search results are shown on the page.

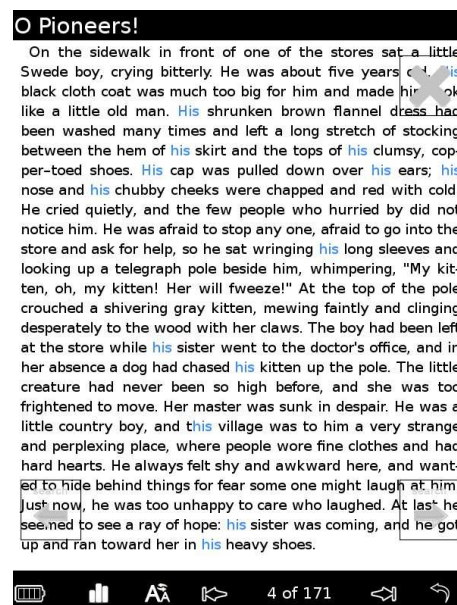

Hint

- Tap the big arrows to continue searching.
- Tap the big cross to close the search operation.

Using table of contents

1. Tap “Table of contents” in the options to open the table of contents list.

Title Page	Page 1
epubBooks Information	Page 2
BOOK ONE	3 items
BOOK TWO	3 items
BOOK THREE	3 items

2. Tap the desired chapter to open the page.

Hints

- “Items” means that the chapter has subchapters.
- You can only open a (sub)chapter when it’s page number appears in the list.

Internal link


The Reader supports “internal links”. Tap the internal link to jump to the linked page. You can open the table of contents list as described above. Alternatively, you can tap the table of contents in the regular book page to jump to the desired page. (Table of contents is a kind of internal link from the technical point of view.)

Die Stopfnadel	31
Tölpelhans	33
Fünf in der Schote	36
Das Märchen vom Sandmann	38
Die Theekanne	45
Die Blumen der kleinen Ida	46
Das kleine Mädchen mit den Schwefelhölzern	50
Die wilden Schwäne	52
Die glückliche Familie	61
Der Engel	63
Der standhafte Zinnsoldat	65
Des Kaisers Nachtigall	68
Die Schneekönigin	74

Jumping to pages (“Go to Page”)

You can jump to pages using the numeric keyboard.

 
1. Tap the page number at the bottom of the screen. The numeric keyboard appears.

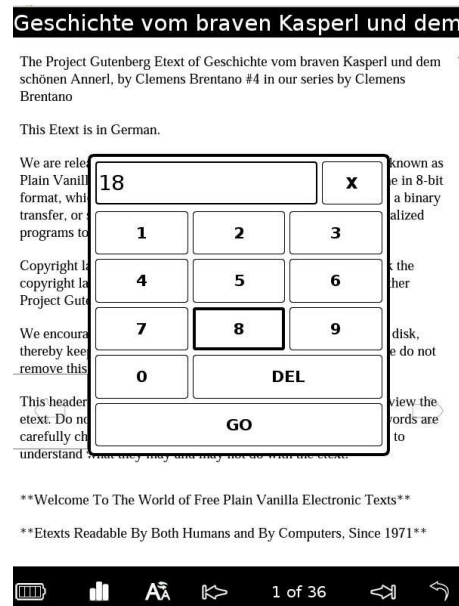

2. Tap the number key to input the page number. The input number is displayed in the input area. To delete the number, tap the “DEL” key.
3. Tap “GO”
The desired page appears.

Adjusting the font

 You can change font of any non-PDF books such as epub, txt, html using the “Font” menu. Select from different font.

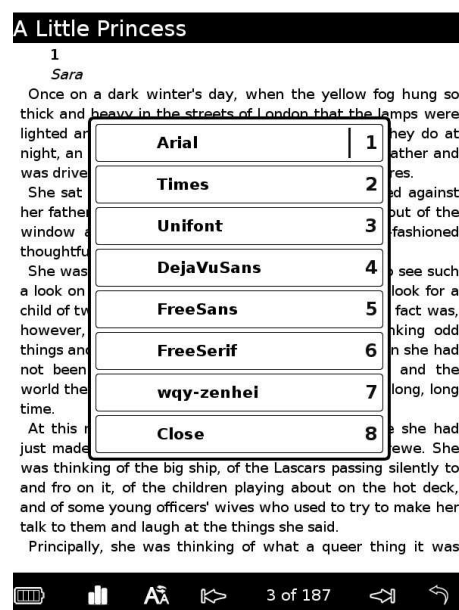


Hint

This option is not available for PDF files and PDF in reflow mode.

Magnifying book page (Zoom in/out), PDF Only

You can magnify the PDF book page using the "Font Size and Scale" menu. Select from 10 different levels, from 20% to 300%. Select "Fit" to adjust the page to the screen size automatically. "100" is set by default.

 Four arrows are shown on the screen. Tap on them to move the page in different directions.

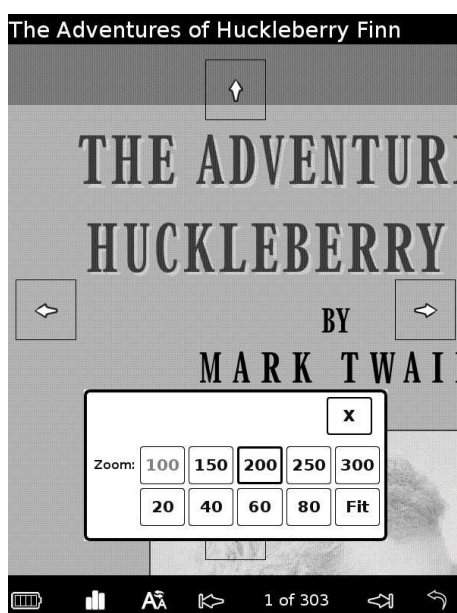


Hint

The four arrows don't appear when "Fit" is selected.

You can also press the "space" key to active the Magnify function.

Adjusting the font size

 You can change font size of any non-PDF books such as epub, txt, html using the "Font Size and Scale" menu. Select from 5 different text sizes (S, M, L, XL or XXL). "S" (original size) is set by default.

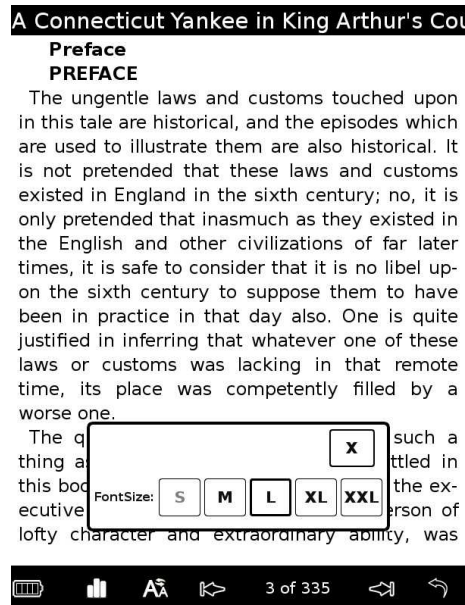


Hint

This option is not available for PDF files.

This option is also applicable to PDF in reflow mode.

Adjusting the line spacing

 You can change the line spacing of any non-PDF books such as epub, txt, html using the "Line Spacing" menu. Select from options.

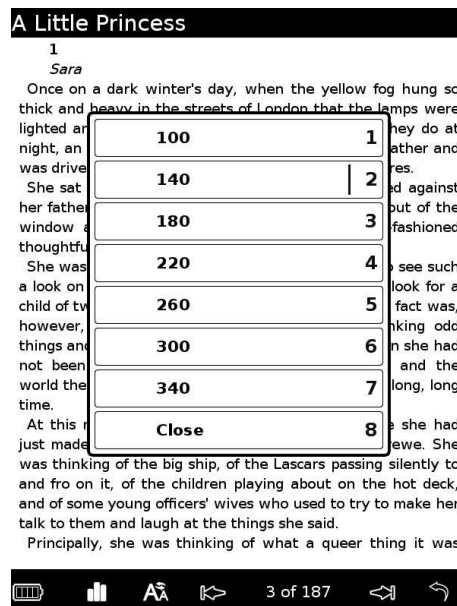

Hint

This option is not available for PDF files and PDF in reflow mode.

Return to List

Tap "Return to List" to go to the book list.

Delete

Tap "Delete" to delete the current book.

Info

Tap "Info" to display the meta data of the book.

Orientation

Tap "Orientation" to switch the screen orientation (vertical/horizontal).

Close

Tap "Close" to close the menu.

How to use Adobe DRM

Your Reader supports Adobe-DRM protected PDF and ePUB files. When you download Adobe DRM-protected files for the first time, you need to authorize your Reader.

If you do not have an Adobe ID, create it by following the on-screen instructions:

1. Create an account at Adobe.com
2. Download and install Adobe Digital Editions for free:
<http://www.adobe.com/products/digitaleditions/>
3. Use your account and password to log into your Adobe Digital Editions. Authorize your computer with an Adobe ID
4. Buy a DRM-protected book.
5. Open the book with your Adobe Digital Editions
6. If everything OK so far, connect your Reader to USB.
7. Your Adobe Digital Editions will ask you if you want to authorize your Reader with your Adobe ID.
8. Say Yes.
9. Copy your newly bought book to your Reader.
10. You should be able to write it now.
11. If Point 9 does not work, disconnect your Reader from USB and close Adobe Digital Editions. Connect your Reader to USB restart Adobe Digital Editions.

Hints:

The following online information may help you to understand the Adobe DRM:

<http://www.adobe.com/products/digitaleditions/faq/>

<http://www.adobe.com/products/digitaleditions/help/>

Viewing Pictures

2.18 Viewing Pictures

You can view JPG, JPEG, GIF, PNG, BMP, TIF and SVG files on the Reader.

 
1. Tap “Pictures” in the main menu to open the picture list.



2. Tap a picture of your choice.

Option menu of the “Pictures” list


Tap the Option icon to open the Option menu.

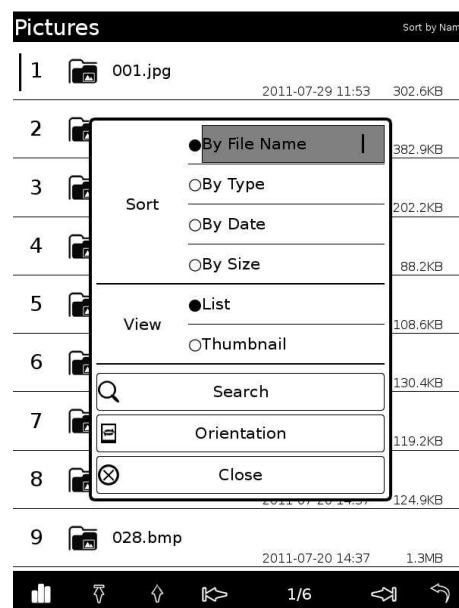

Option item	Description
Sort	Sorts the "Pictures" list by file name, type, date, size.
View	Switches the list display format to list or thumbnail.
Search	Searches a desired picture by keyword.
Orientation	Switches the screen orientation (vertical/horizontal).
Close	Closes the menu.

Switching the list display format

 You can choose to display the list format in either "List" or Thumbnail" view. In the Option menu, tap "Thumbnail" of "View" to switch the list display format.

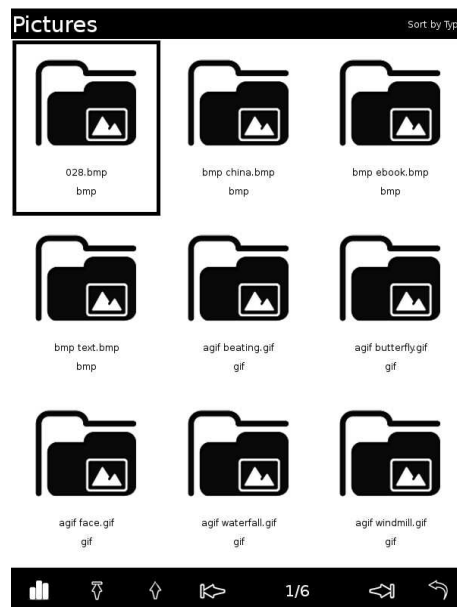


Note

- Pictures up to 1GB file size have been tested to show on the Reader. However, not all pictures are guaranteed to work.

Browsing pictures


There are various ways to browse the pictures.

 1. Using the buttons 11 and 12 located on the top right side of the Reader.
2. Use the left and right arrows at the bottom of the screen.
3. Start the slide show in the options
4. Dragging on the screen.

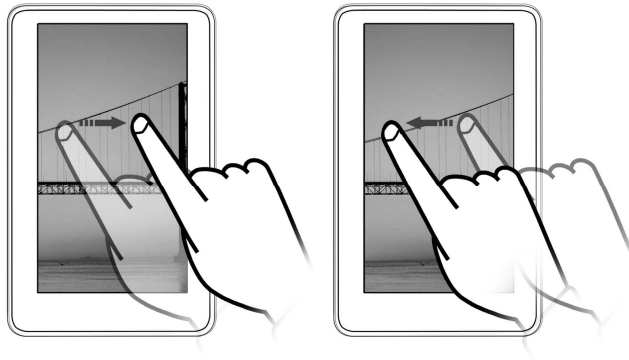

Operations on the Picture viewer

 On the Picture viewer, you can perform the following operations.

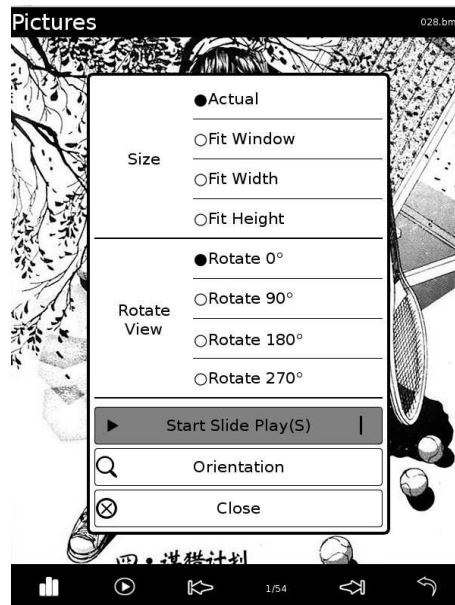

Option item	Description
Size	Change the picture size to different criteria: Actual: Display the original picture size. Fit windows: Scales the picture size to the screen. Fit Width: Scales the picture size to the width of the screen. Fit Height: Scales the picture size to the height of the screen.
Rotate View	Rotate the picture to 0°, 90°, 180° and 270°.
Start slide play	Plays pictures in the pictures list automatically (slide show).
Orientation	Switches the screen orientation (vertical/horizontal).
Close	Closes the menu.

Comics viewer

2.19 Comics viewer

You can view CBR and CBZ files on the Reader.

 
1. Tap “Comics” to open the comics list.



2. Tap a comic of your choice.

Option menu of the “Comics” list


Tap the OPTIONS icon to open the Option menu.

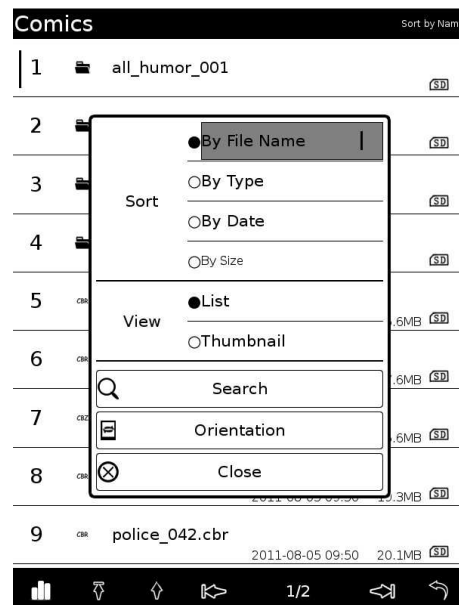

Option item	Description
Sort	Sorts the "Comics" list by file name, type, date, size.
View	Switches the list display format to list or thumbnail.
Search	Searches a desired picture by keyword.
Orientation	Switches the screen orientation (vertical/horizontal).
Close	Closes the menu.

Switching the list display format

 
You can choose to display the list format in either "List" or Thumbnail" view. In the Option menu, tap "Thumbnail" of "View" to switch the list display format.

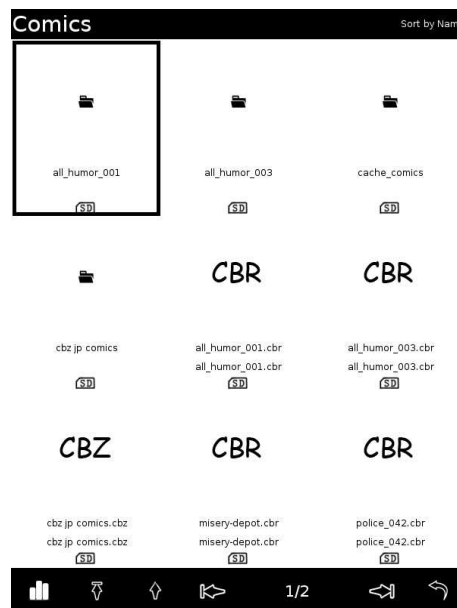

Browsing comics


There are various ways to browser the comics.

 1. Using the buttons 11 and 12 located on the top right side of the Reader.
2. Use the left and right arrows at the bottom of the screen.
3. Start the slide show in the options
4. Dragging on the screen.

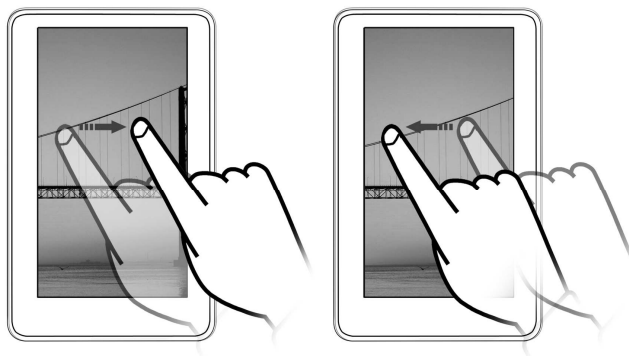

Operations on the Comics viewer

 On the Comics viewer, you can perform the following operations.

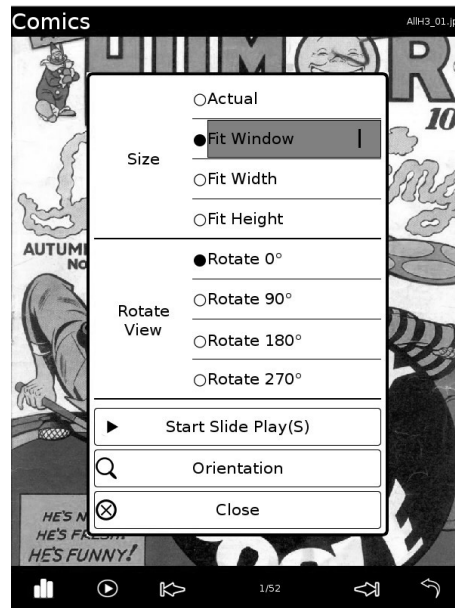










Option item	Description
Size	Change the picture size to different criteria: Actual: Display the original picture size. Fit windows: Scales the picture size to the screen. Fit Width: Scales the picture size to the width of the screen. Fit Height: Scales the picture size to the height of the screen.
Rotate View	Rotate the picture to 0°, 90°, 180° and 270°.
Start slide play	Plays pictures in the pictures list automatically (slide show).
Orientation	Switches the screen orientation (vertical/horizontal).
Close	Closes the menu.

Playing Audio Files

2.20 Playing audio files

You can play back MP3 files on the Reader. You can also read books and view pictures while listening to audio files. Audio files can be played back through the built-in speaker or you can connect the optional headphones to the headphone jack.

1. Tap "Audio" to open the song list. Tap a song of your choice.

Audio				Sort by Name
1		PE Track06.mp3	2011-07-20 14:39	0B
2		PE Track07.mp3	2011-07-20 14:39	0B
3		PE Track08.mp3	2011-07-20 14:39	0B
4		PE Track09.mp3	2011-07-20 14:39	0B
5		PE Track10.mp3	2011-07-20 14:39	0B
6		PE Track11.mp3	2011-07-20 14:39	0B
7		Sleep Away.mp3	2011-07-20 14:39	0B
8		Yesterday Once More.mp3	2011-07-20 14:39	0B
9		someone to love.mp3	2011-07-20 14:39	3.8MB

Thumbnails of pictures (if contained on music files) are displayed in the list.

2. In the “Audio” list, tap the desired track.










Note

The Reader only supports MP3 files with ID3 tags embedded. ID3 allows information such as the title, artist, album, track number, and other information about the MP3 file to be stored in the file itself. The playback of MP3 files without ID3 will be supported in the future release.

You may use some tools to add ID3 tags to your MP3 files manually so that the Reader can play them.

Option menu of the “Audio” list

Tap the Option icon to open the Option menu.

Audio				Sort by Name
1		PE Track06.mp3	2011-07-20 14:39	0B
2		<div> <div>● By File Name</div> <div>○ By Type</div> <div>○ By Date</div> <div>○ By Size</div> <div>● List</div> <div>○ Thumbnail</div> <div>Search</div> <div>Orientation</div> <div>Close</div> </div>		0B
3				0B
4				0B
5				0B
6				0B
7				0B
8				0B
9				0B
		someone to love.mp3	2011-07-20 14:39	3.8MB

Option item	Description
Sort	Sorts the audio files by file name, type, date, size.
View	Switches the list display format to list or thumbnail.
Search	Searches a desired picture by keyword.
Orientation	Switches the screen orientation (vertical/horizontal).
Close	Closes the menu.

Operations on the Audio player

On the Playback screen, you can perform the following operations.




The audio player displays the following information:

- The file name of the audio file.
- The total time of the music file.

The audio player displays the following information (if contained on music files):


- The picture of the album.
- The artist name.
- The track name.
- The album name.
- The year of publishing.
- The genre of the music.

Icons	Description
	Plays the music.
	Stops the music.
	Skips to the previous song.
	Skips to the next song.

	Adjust the volume: Volume up and volume down
---	--

Further features of the audio player

 Tap the Option icon to open the Option menu.

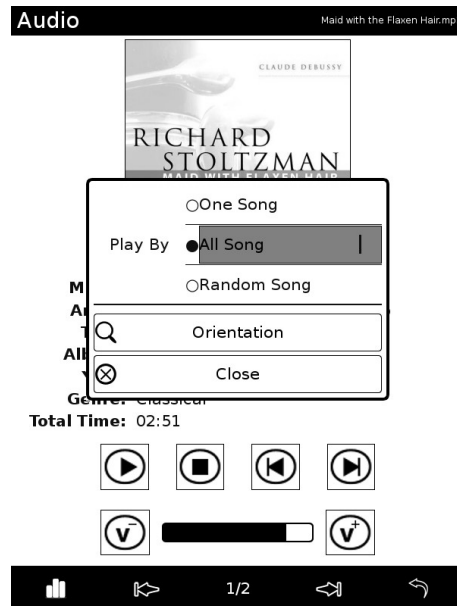


Option item	Description
Play By	One Song: Plays the current track repeatedly. All Songs: Plays all tracks repeatedly. Random songs: Plays all tracks in random order.
Orientation	Switches the screen orientation (vertical/horizontal).
Close	Closes the menu.

Settings

2.21 Changing Settings

You can configure various settings in the "Settings" menu.

 1. In the main windows, tap the "Settings" icon.

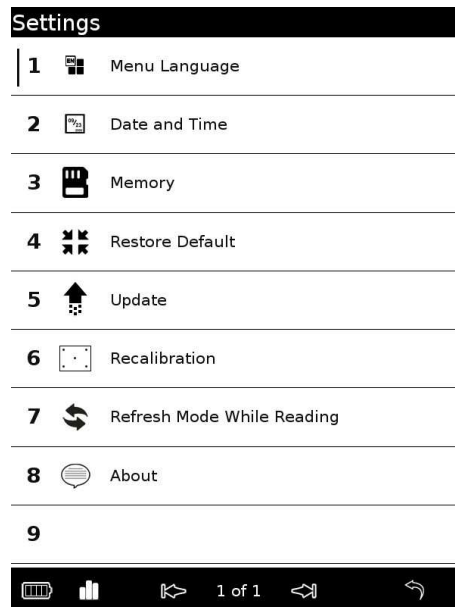

2. In the "Settings" menu, select the setting item you want to change.
 - Illustrations below show the "Date and Time" setting.

The screenshot shows the 'Date And Time' settings screen. It includes input fields for Year, Month, Day, Hour, and Minute. Below these fields is a numeric keypad with digits 1-9 and 0. At the bottom right are 'OK' and 'Cancel' buttons. The bottom navigation bar is also visible.

Field	Value
Year	2 0 1 1
Month	0 9
Day	0 1
Hour	1 1 24h
Minute	2 9


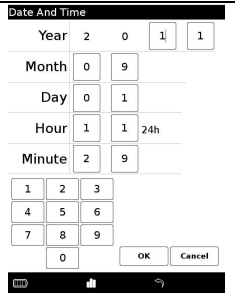 

Numeric keypad: 1, 2, 3, 4, 5, 6, 7, 8, 9, 0

Buttons: OK, Cancel

3. Tap the desired part or field to change the setting. To input a number, tap the numeric key.
4. Tap "OK" to confirm the setting, or tap "Cancel" to cancel the setting.

2.22 Settings menu items

In the "Settings" menu, you can configure the following settings.

Setting item		Description
Menu Language		Sets the language of the displayed menu or messages.
Date and Time		Sets date and time displayed on the Reader. To input the value, tap the numeric key.
Memory		Shows Information on the internal memory and the Micro SD card.
Restore Default		Restore all the default settings of the Reader.
Update		Update the firmware. Copy the update file to the root directory of the internal memory or a memory card. Tap the Update icon and follow the on-screen instructions. The name of the update files has the following format: *.ebr2
Recalibrate		Lets you calibrate the touch screen by following the on-screen instructions.
Refresh Mode while Reading		Lets you set after how many pages the Reader completely refreshes the screen during reading. The default value is 1.
About		Displays the firmware version of the Reader, the product name, license information, etc.

Other Information

2.23 Notes on Reader Disposal

The built-in rechargeable battery of the Reader is recyclable. Do not remove the battery yourself, consult your local dealer.

2.24 Precautions

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product. Applicable accessories: Headphones

For Customers in the USA and Canada

RECYCLING LITHIUM-ION BATTERIES

Lithium-ion batteries are recyclable.

You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.

For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.rbrc.org/>.

Caution: Do not handle damaged or leaking Lithium-ion batteries.

On Safety

- Do not insert any foreign objects in the DC IN jack of the Reader.
- Be sure not to short-circuit the terminals of the Reader with metallic objects.

On heat build-up

Heat may build up in the Reader while charging, or if it is used for an extended period of time.

On the headphones

Road safety

Do not use headphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in many areas. It can also be potentially dangerous to play at a high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Avoid using the headphones at a high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce the volume or discontinue use.

Caring for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Warning

If lightning occurs while you are using the Reader, take off the headphones immediately.

Note on use

- Replacement or repair of the touch screen if broken or scratched during use is not covered by the warranty.
- Do not drop or submit the Reader to excessive shock.
- Never subject the Reader to extremes of light, temperature, moisture or vibration.
- Never wrap the Reader in anything when it is being used with the AC adapter. Heat build-up in the Reader may cause malfunction or damage.
- Do not put any heavy object on top of the Reader or apply a strong shock to the Reader. It may cause a malfunction or damage.
- Do not leave the Reader on an unstable surface.
- Do not expose the Reader to water. The Reader is not waterproof.
- Remember to follow the precautions below.
 - Be careful not to drop the Reader into a sink or other container filled with water.
 - Do not use the Reader in humid locations or bad weather, such as in the rain or snow.
 - Do not get the Reader wet.If you touch the Reader with wet hands, or put the Reader in a damp article of clothing, the Reader may get wet and this may cause a malfunction.
- The touch screen is delicate and subject to cracking. Handle the Reader with due care.
- Do not poke people using the supplied stylus.
- Do not treat or use the supplied stylus roughly, such as bending it, or scratching the touch screen with it.
- Use the supplied stylus only for touch screen operations.
- Do not use the stylus if it is damaged or deformed.
- Depending on the types of the text and characters, the text shown on the Reader may not be displayed properly on device. This is due to:

- The capacity of the Reader.
- The Reader is not functioning normally.
- Content information is written in the language or the character that is not supported by the Reader.

Notes on memory cards

- About Micro SD (TF) Memory Card
Micro SD (TF) Card complies with compact memory card standard and is commonly used as a storage media for digital still cameras.
- Notes on handling memory cards
The Reader does not comply with the following:
 - MagicGate standard.
 - Copyright protection of Micro SD (TF) Memory Cards.
- Keep a memory card in its case when you carry or store it.
- Do not touch the connector of a memory card with bare hands or metallic objects.
- Do not bend, drop, or subject a memory card to excessive shock.
- Do not disassemble or modify a memory card.
- Do not allow a memory card to get wet.
- Avoid the following to prevent data damage. Your dealer does not provide any guarantee for damaged data.
 - Remove a memory card or turn off the Reader while reading or writing data.
 - Operate the Reader in the location where static charge or electrical noise is present.
- Do not use a label other than the dedicated one in the label area.
- Do not use or store the Reader in a location subject:
 - Extreme high temperature, such as in a sun-heated car.
 - Direct sunlight.
 - High humidity or places with corrosive substances.

On Cleaning

- Clean the case of the Reader with a soft cloth, such as a cleaning cloth for eyeglasses.
- If the case of the Reader becomes very dirty, clean it with a soft cloth slightly moistened with water or a mild detergent solution.
- Do not use any type of abrasive pad, scouring powder, or solvent, such as alcohol or benzene, as it may mar the finish of the case.
- Be careful not to let water get into the Reader.
- Clean the headphone plug periodically.
- Tapping or dragging on the touch screen using a dirty stylus may damage the surface. Wipe the stylus with a dry cloth when it gets dirty.

Specifications

BTB-600-T

Built-in rechargeable battery: DC 3.7V AC adapter: DC 5V 2A USB

User available capacity

Approx. 3GB in case that a 4GB flash is built-in.

Available memory capacity of the Reader may vary.

 
"Features can change without notice"

Imported: I.R.P., S.L.

Avda. Santa Clara de Cuba 5

41007 Sevilla

Spain

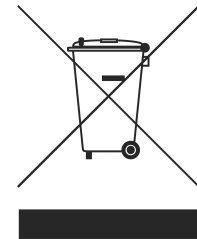

DECLARATION OF CONFORMITY

I.R.P., SL declare under our responsibility that the equipment meets the requirements indicated in the following directives:

EMC DIRECTIVES

EN55022:2006+A1:2007+A2:2006

EN55024:1998+A1:2001+A2:2003

EN61000-3-2:2006

EN61000-3-3:2008

Description of apparatus:

BRIGMTON Model BEB-600-T

Text files reader

Importer: I.R.P., SL

Address: Avenida Santa Clara de Cuba 5, 41007, Sevilla.